C530

14A631

A244
Key pad switch assembly

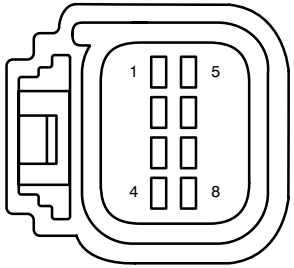

F08203

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad button 1/2, Key pad button 5/6
2	1013 (BN/LG)	Illumination
3	79 (LG/RD)	Key pad button 5/6
4	–	not used
5	57 (BK)	Ground
6	124 (BN)	Key pad common
7	121 (YED/BK)	Key pad button 5/6, Key pad button 9/0
8	–	not used

C577

as of 8/20/2001

14A411

N409
Exterior rear view mirror switch (17B676)

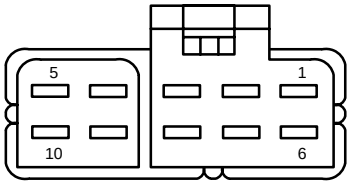

F10127

Pin	Circuit	Circuit function
1	1037 (VT/LG)	to Power mirrors Right/Left mirror movement Exterior rear view mirror switch (17B676)
2	875 (BK/LG)	Ground
3	1477 (YE/BK)	Exterior rear view mirror switch (17B676), to, Power mirrors
4	1479 (DB/OG)	Left mirror, Up/Down mirror movement
5	1475 (PK/OG)	Power mirror, RH side, Up/Down mirror movement
6	1038 (VT/YE)	Exterior rear view mirror switch (17B676) to Power mirrors Right/Left mirror movement
7	956 (OG/LG)	Voltage supplied at all times (overload protected)
8	–	not used
9	1478 (DG/OG)	Power mirror, left, Right, Right/Left mirror movement
10	1476 (RD/OG)	Power mirror, left, Right/Left mirror movement

C560

as of 8/20/01

14A005

M114
Power mirror fold motor, driver side



F02005

Pin	Circuit	Circuit function
1	1037 (VT/LG)	Exterior rear view mirror switch (17B676), to, Power mirrors, Right/Left mirror movement
2	1038 (VT/YE)	Power mirror fold switch to Power mirrors Right/Left mirror movement