C433 (BK)

14407

A31
Fuel tank unit
(9H307)

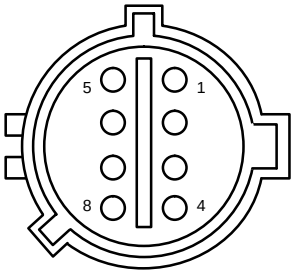

F08052

Pin	Circuit	Circuit function
1	–	not used
2	351 (BN/WH)	Reference, voltage
3	359 (GY/RD)	signal, return
4	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
5	1203 (BK/LB)	Ground
	1357 (LB/YE)	Fuel pump/fuel gauge sender, return
6	787 (PK/BK)	Fuel pump, Power
7	1205 (BK)	Ground
8	29 (YE/WH)	Fuel pump/fuel gauge sender, return
	1356 (LG/VT)	

C438

17A431

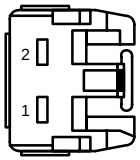

F02251

14A583

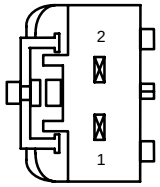

F02253

(1) 1205 (BK)
(2) 186 (BN/LB)

C439

5K762

E201
Trailer tow connector (15A416)

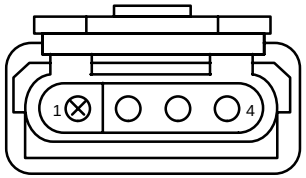

F04211

Pin	Circuit	Circuit function
1	206 (WH)	Trailer tow connector (15A416), Ground
2	962 (BN/WH)	Trailer tow relay, switched output
3	52 (YE)	Turn lamps, feed, left rear
4	64 (DG)	Turn lamps, feed, right rear

C440

14407

B17
Wheel speed sensor, left rear

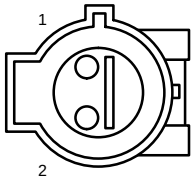

F02085

Pin	Circuit	Circuit function
1	518 (LG/RD)	Wheel speed sensor, left rear –
2	519 (LG/BK)	Wheel speed sensor, left rear +

C450

14407

Y131
Evaporative emission (EVAP) canister vent valve (9F945)

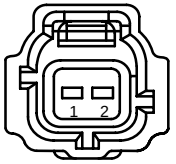

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent