C504b

14A005

N447
Master window adjust switch (14529)

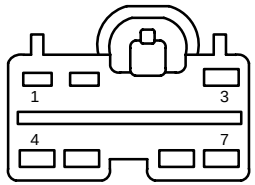

F07043

Pin	Circuit	Circuit function
1	296 (WH/VT)	Fused accessory relay, switched power, output
2	57 (BK)	Ground
3	193 (YE/LG)	Window safety relay, switched output
4	320 (RD/BK)	Window switch, feed, right rear, Down
5	57 (BK)	Ground
6	316 (YE/LB)	Window switch, feed, left rear,Up
7	317 (GY/OG)	Window switch, feed, left rear, Down

C505

14A005

N204
Door lock switch, driver side (14028)

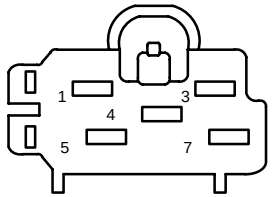

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	57 (BK)	Ground
3	120 (PK/LG)	Door unlock relay, control
4	517 (BK/WH)	Voltage supplied at all times (overload protected)
4	57 (BK)	Ground
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	119 (PK/YE)	Door lock relay, control
7	57 (BK)	Ground

C506

14A005

E177
Door entry lamp, left front (13776)

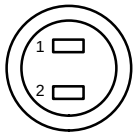

F02063

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output