## C1251a

**14305**

O47
Generator, second-
ary

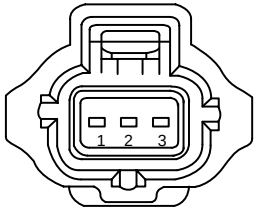


F03273

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1183 (YE) | Generator, Power |
| 2 | – | not used |
| 3 | 35 (OG/LB) | Voltage supplied at all times (overload protected) |

## C1251b

**10K304**

O47
Generator, second-
ary



F01085

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 38 (BK/OG) | Voltage supplied at all times (not overload protected) |

## C1252

**12A581**

N140
Vacuum warning
switch

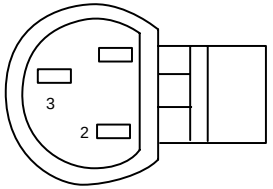


F03275

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 2 | 57 (BK) | Ground |
| 3 | 128 (VT/YE) | Hot in Start or Run |

## C1253

**12A581**

M12
Fuel pump

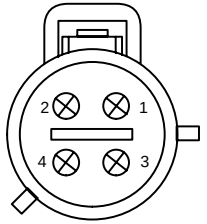


F04263

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 787 (PK/BK) | Fuel pump, Power |
| 3 | 57 (BK) | Ground |
| 4 | – | not used |