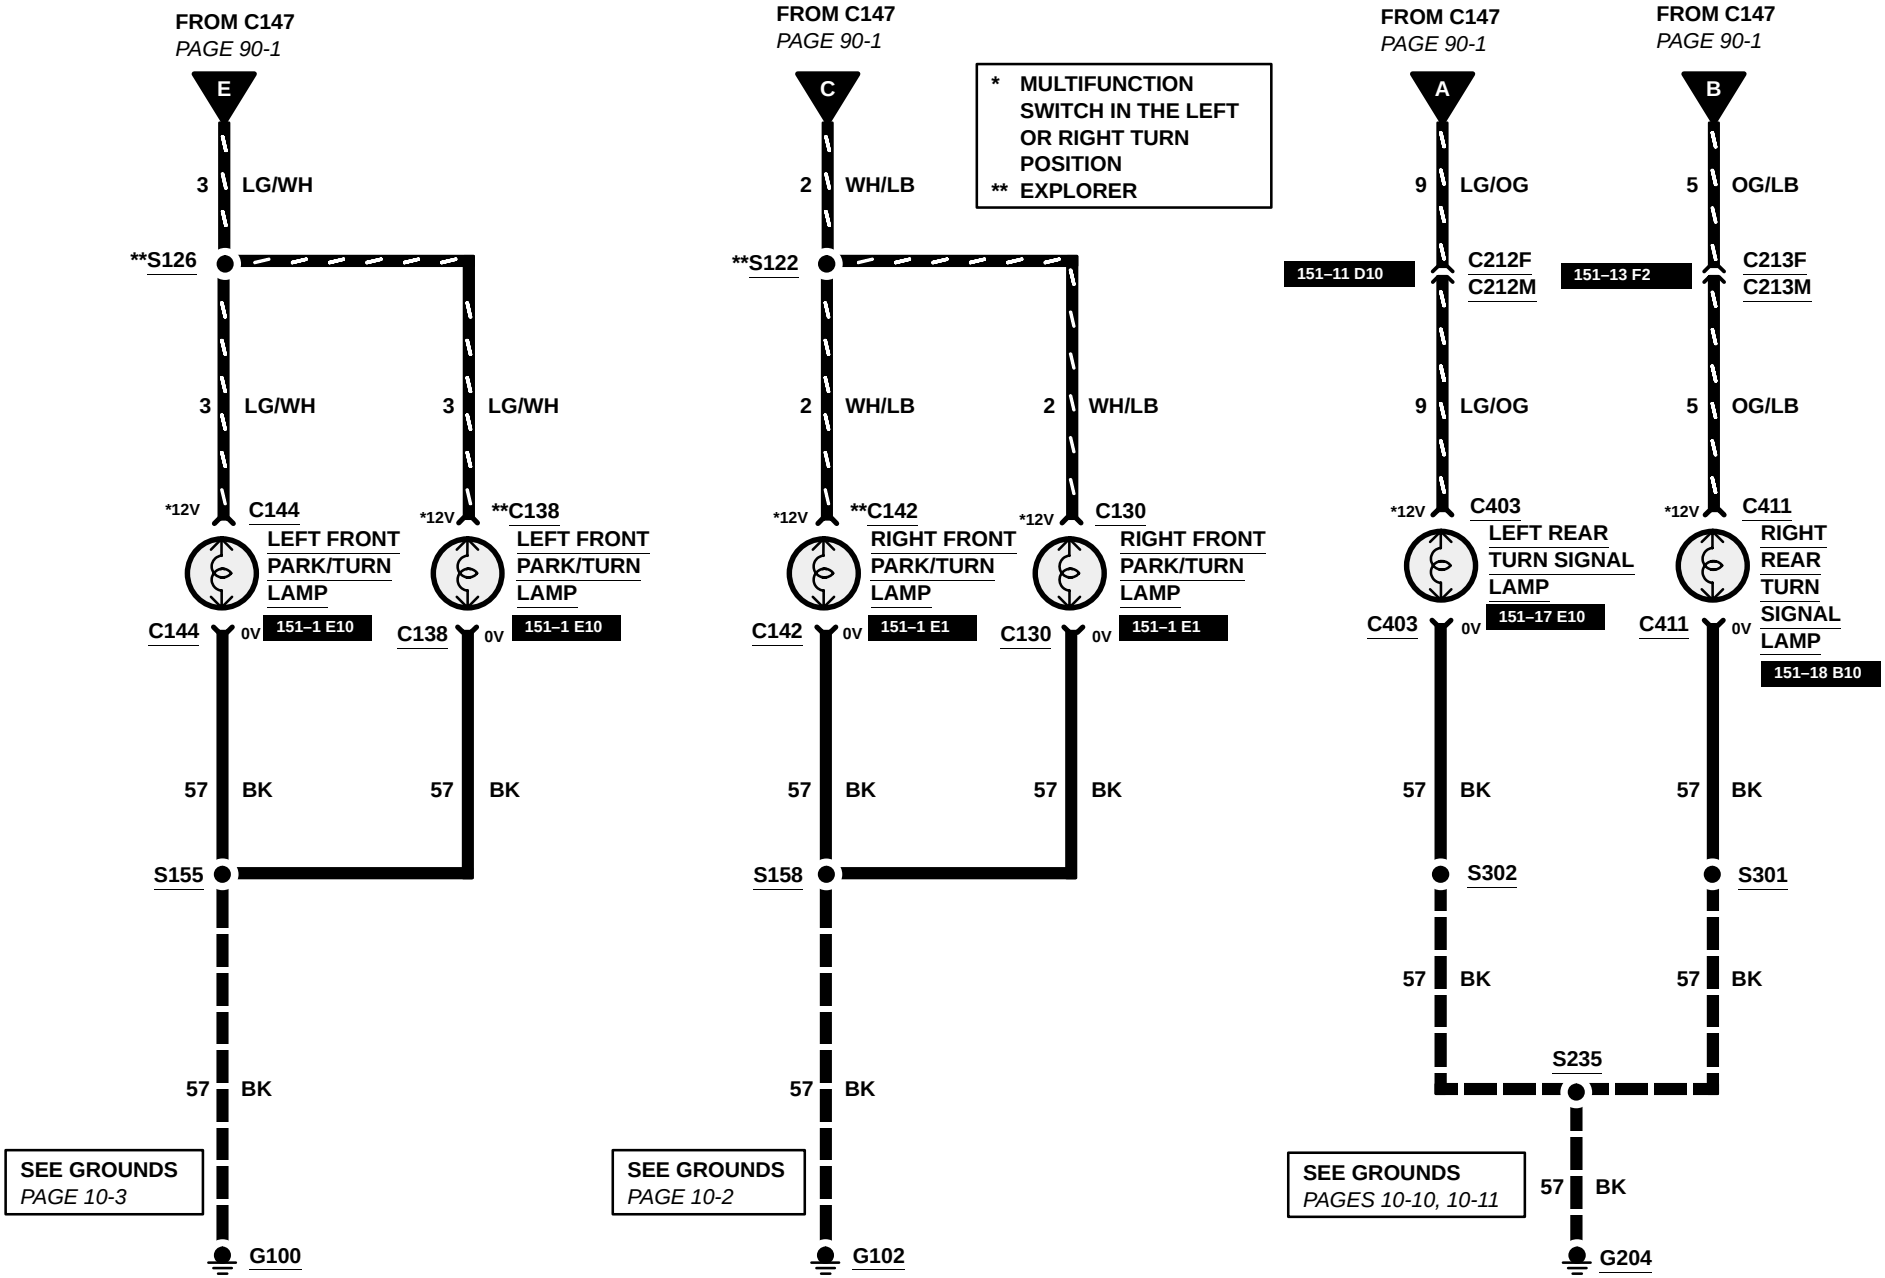
FROM C147
PAGE 90-1
E
3 LG/WH
**S126
3 LG/WH
3 LG/WH
*12V
C144
LEFT FRONT PARK/TURN LAMP
*12V
**C138
LEFT FRONT PARK/TURN LAMP
C144
0V
151–1 E10
C138
0V
151–1 E10
57 BK
57 BK
S155
57 BK
SEE GROUNDS
PAGE 10-3
G100
FROM C147
PAGE 90-1
C
2 WH/LB
**S122
2 WH/LB
2 WH/LB
*12V
**C142
RIGHT FRONT PARK/TURN LAMP
*12V
C130
RIGHT FRONT PARK/TURN LAMP
C142
0V
151–1 E1
C130
0V
151–1 E1
57 BK
57 BK
S158
57 BK
SEE GROUNDS
PAGE 10-2
G102
* MULTIFUNCTION SWITCH IN THE LEFT OR RIGHT TURN POSITION
** EXPLORER
FROM C147
PAGE 90-1
A
9 LG/OG
151–11 D10
C212F
C212M
9 LG/OG
*12V
C403
LEFT REAR TURN SIGNAL LAMP
C403
0V
151–17 E10
57 BK
57 BK
S302
57 BK
S235
SEE GROUNDS
PAGES 10-10, 10-11
57 BK
G204
FROM C147
PAGE 90-1
B
5 OG/LB
151–13 F2
C213F
C213M
5 OG/LB
*12V
C411
RIGHT REAR TURN SIGNAL LAMP
151–18 B10
C411
0V
57 BK
57 BK
S301
57 BK