C914

14334

A217
Rain sensor module

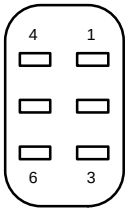

F006181

Pin	Circuit	Circuit Function
1	8-KA41 (WH/GN)	Sensor signal
2	–	not used
3	10-KA41 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
4	7-KA41 (YE/GN)	Voltage D.C. supplied at all times (sensor)
5	–	not used
6	20-KA41 (PK/BK)	Voltage, hot in run only

C915

14334

N417
Emergency message switch

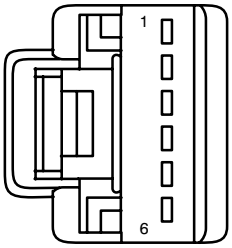

F006179

Pin	Circuit	Circuit Function
1	10-GP6 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
2	9-GP6 (BN/RD)	Sensor signal return (reference/ground)
3	–	not used
4	31-GP6 (BK)	Ground
5	64S-GP6 (BU/RD)	Variable D.C. voltage (not overload protected), Switched
6	8-GP6 (WH/RD)	Sensor signal

C920

15C670

M201
Roof opening panel motor assembly

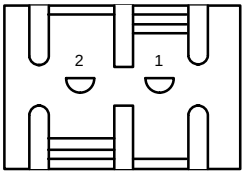

F02121

Pin	Circuit	Circuit Function
1	32-AG6 (WH)	Switched between: Battery voltage, Ground or Open
2	33-AG6 (YE)	Switched between: Battery voltage, Ground or Open

C921a

15C670

A214
Roof opening panel module

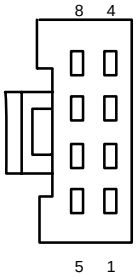

F08163

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	33-AG10 (YE/BU)	Switched between: Battery voltage, Ground or Open
4	32-AG10 (WH/BU)	Switched between: Battery voltage, Ground or Open
5	5-AG12 (BU/BK)	Data link, bus negative
6	4-AG12 (GY/OG)	Data link, bus positive
7	32-AG12 (WH/GN)	Switched between: Battery voltage, Ground or Open
8	9-AG7 (BN/RD)	Sensor signal return (reference/ground)