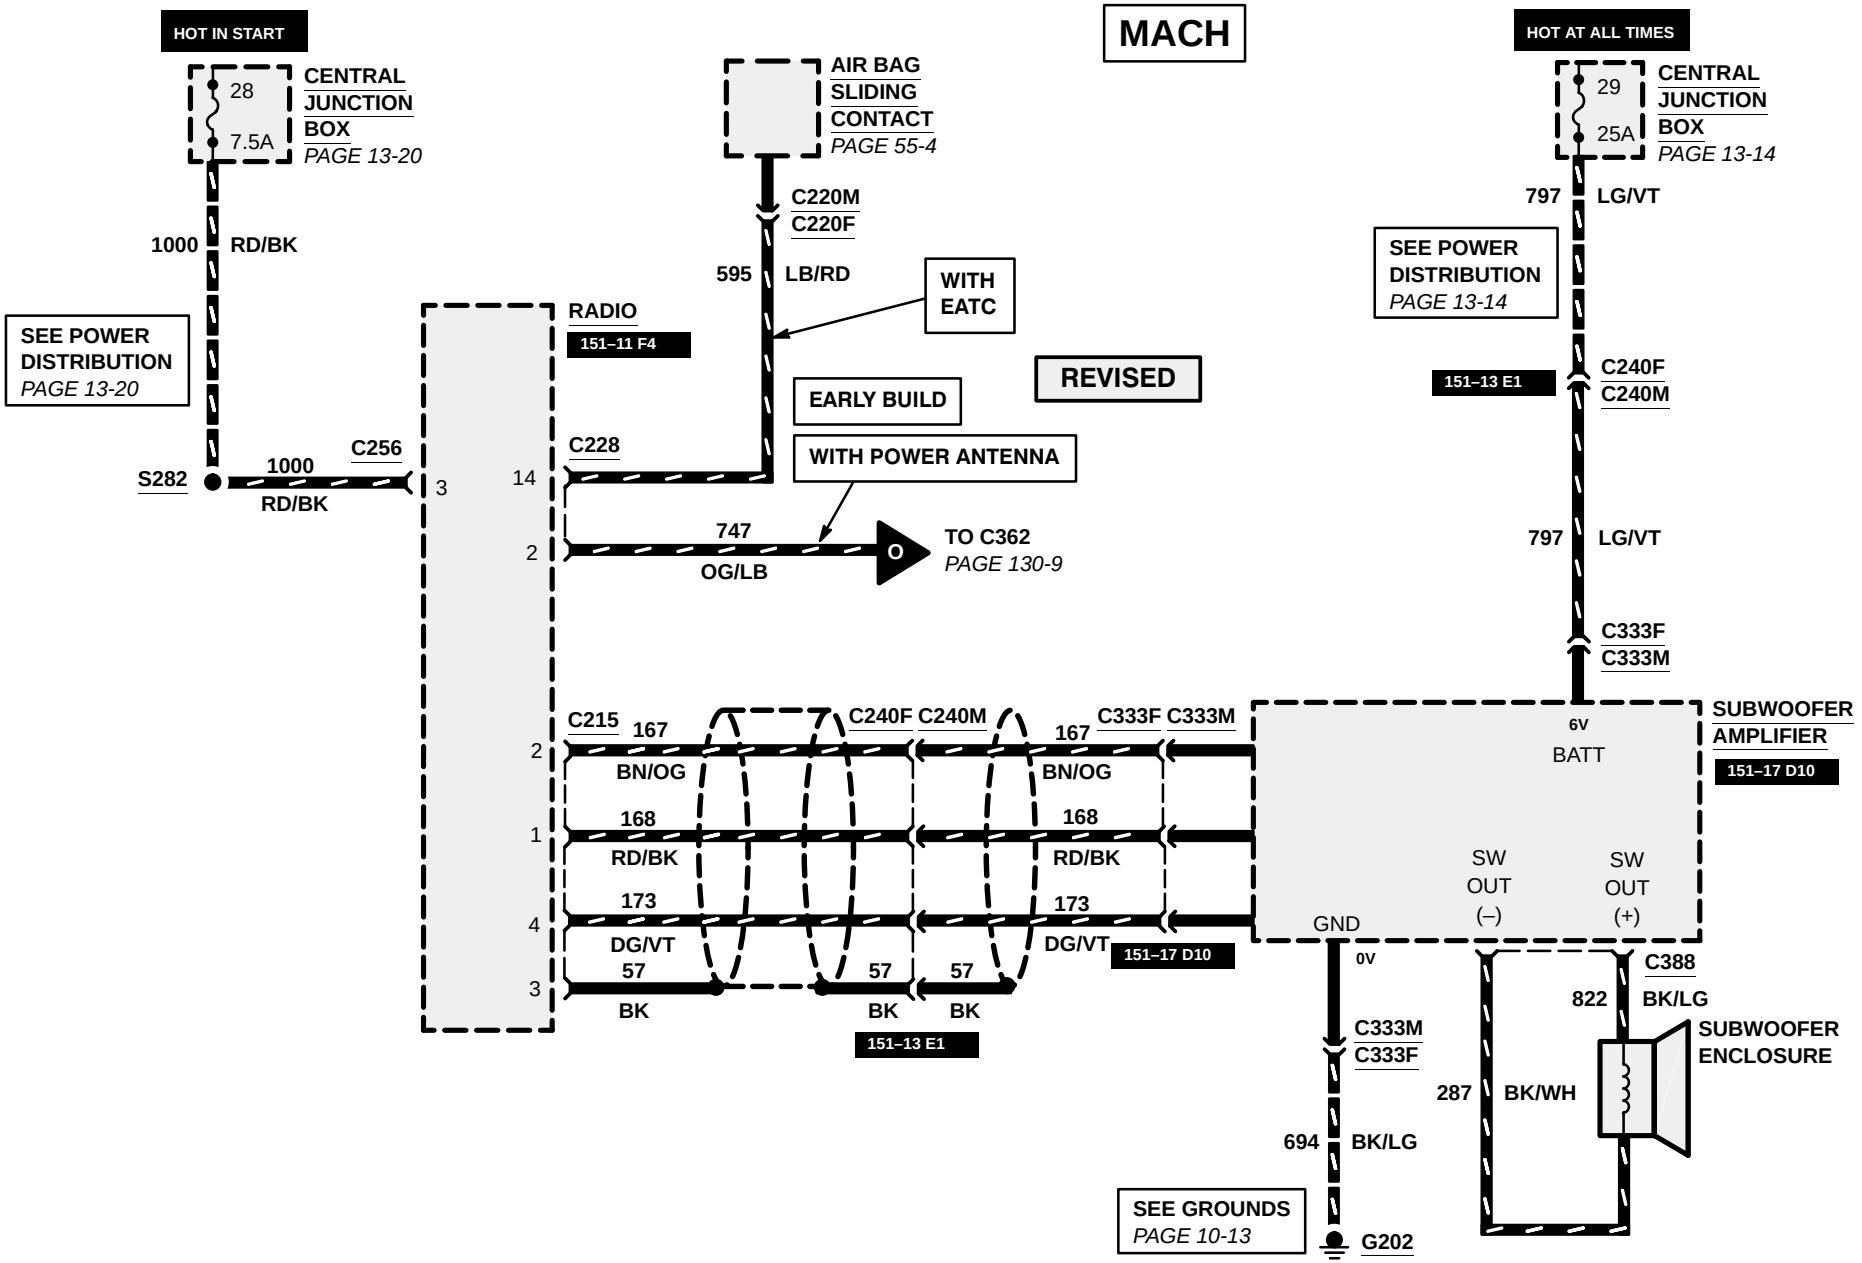
MACH
HOT IN START
CENTRAL JUNCTION BOX
28
7.5A
PAGE 13-20
1000 RD/BK
SEE POWER DISTRIBUTION
PAGE 13-20
S282
1000 RD/BK
C256
3
RADIO
151–11 F4
AIR BAG SLIDING CONTACT
PAGE 55-4
C220M
C220F
595 LB/RD
WITH EATC
REVISED
EARLY BUILD
WITH POWER ANTENNA
C228
14
2
747 OG/LB
TO C362
PAGE 130-9
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
29
25A
PAGE 13-14
797 LG/VT
SEE POWER DISTRIBUTION
PAGE 13-14
C240F
C240M
151–13 E1
797 LG/VT
C333F
C333M
SUBWOOFER AMPLIFIER
151–17 D10
6V
BATT
C215
2
167 BN/OG
C240F C240M
167 BN/OG
C333F C333M
1
168 RD/BK
168 RD/BK
4
173 DG/VT
173 DG/VT
3
57 BK
57 BK
57 BK
151–13 E1
151–17 D10
SW OUT (–)
SW OUT (+)
GND
0V
C388
822 BK/LG
SUBWOOFER ENCLOSURE
287 BK/WH
C333M
C333F
694 BK/LG
SEE GROUNDS
PAGE 10-13
G202