C377

14405

Y202
EVAP canister vent control solenoid

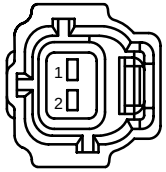

F02103

Pin	Circuit	Circuit function
1	101 (GY/YE)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C378

14B110

Y236
Differential lock solenoid

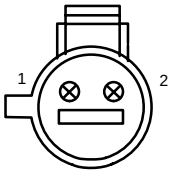

F02113

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	780 (DB)	Four–wheel drive relay, output

C389

14405

A116
Seat belt tensioner, passenger seat

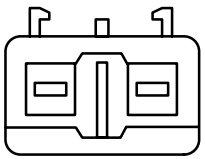
F02297

Pin	Circuit	Circuit function
1	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
2	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed

C392

14405

N316
Inertia Fuel Shutoff (IFS) switch (9D362)



F03072

Pin	Circuit	Circuit function
1	238 (DG/YE)	Fuel pump relay, switched power, output
2	787 (PK/BK)	Fuel pump, Power
3	–	not used

C402a

18C673

R19
Rear window defrost grid (18C618)

F01029

Pin	Circuit	Circuit function
1	186 (BN/LB)	Rear window defrost relay, switched power

C402b

18C620

R19
Rear window defrost grid (18C618)

F01029

Pin	Circuit	Circuit function
1	57 (BK)	Ground