Sedan

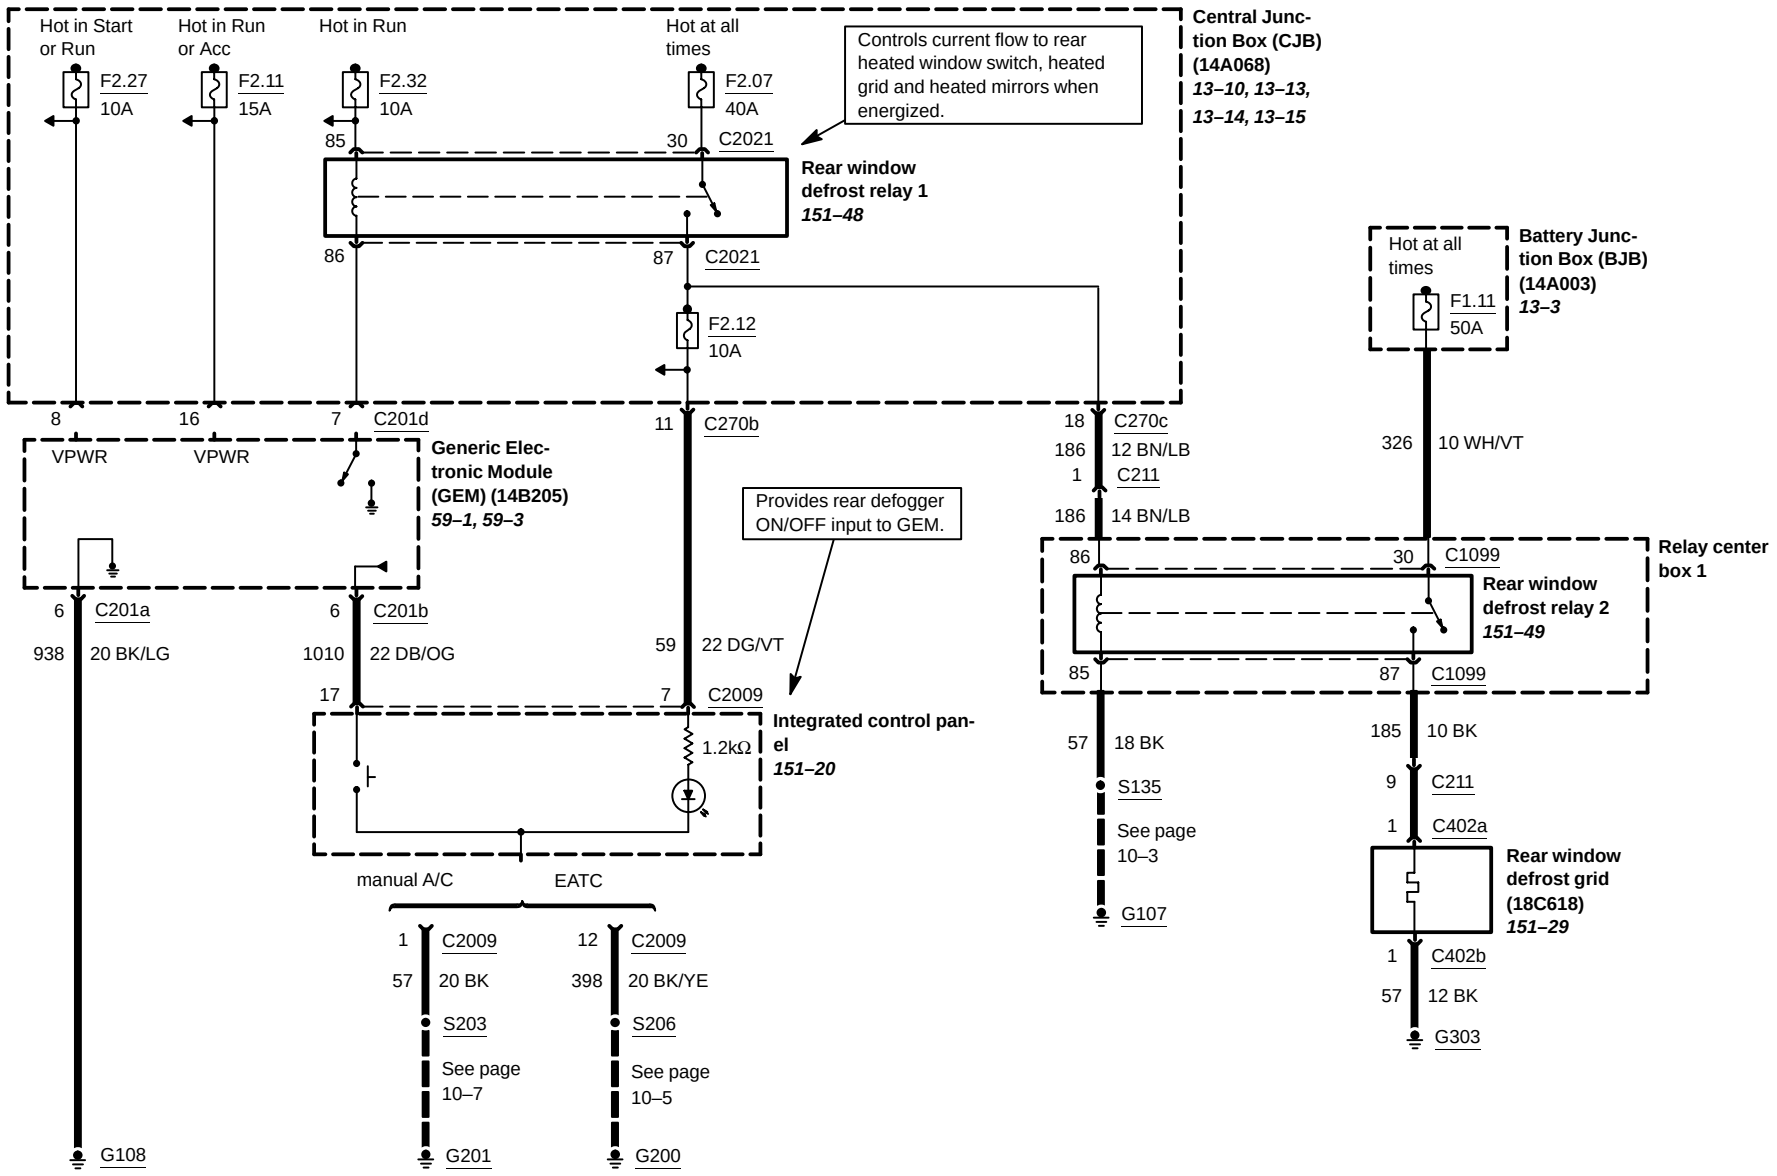
Hot in Start or Run
Hot in Run or Acc
Hot in Run
Hot at all times
F2.27 10A
F2.11 15A
F2.32 10A
F2.07 40A
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Central Junction Box (CJB) (14A068) 13–10, 13–13, 13–14, 13–15
85
30 C2021
Rear window defrost relay 1 151–48
86
87 C2021
F2.12 10A
Hot at all times
F1.11 50A
Battery Junction Box (BJB) (14A003) 13–3
8
16
7 C201d
11 C270b
18 C270c
186 12 BN/LB
1 C211
186 14 BN/LB
326 10 WH/VT
VPWR
VPWR
Generic Electronic Module (GEM) (14B205) 59–1, 59–3
Provides rear defogger ON/OFF input to GEM.
86
30 C1099
Rear window defrost relay 2 151–49
Relay center box 1
85
87 C1099
6 C201a
938 20 BK/LG
6 C201b
1010 22 DB/OG
59 22 DG/VT
17
7 C2009
Integrated control panel 151–20
1.2kΩ
57 18 BK
S135
See page 10–3
G107
185 10 BK
9 C211
1 C402a
Rear window defrost grid (18C618) 151–29
1 C402b
57 12 BK
G303
manual A/C
EATC
1 C2009
57 20 BK
S203
See page 10–7
G201
12 C2009
398 20 BK/YE
S206
See page 10–5
G200
G108