C440

14K024

A35
Instrument interface module

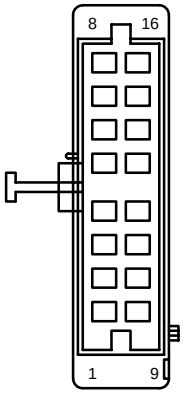

F16008

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	8-GH11 (WH/GN)	Sensor signal
6	–	not used
7	15S-GG15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	31S-TA33 (BK/WH)	Ground, switched
9	29S-GG20 (OG/BU)	Voltage supplied at all times (overload protected), switched
10	–	not used
11	15-GG15 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
12	8-PG11 (WH/BK)	Sensor signal
13	31S-PG11 (BK/RD)	Ground, switched
14	–	not used
15	91-GG15 (BK/GN)	Ground
16	–	not used

C441 (WH)

14K024

N104
Wiper/washer switch



F11002

Pin	Circuit	Circuit Function
1	32-KA10 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	32-KA11 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	32-KA19 (WH/BK)	Switched between: Battery voltage, Ground or Open
5	8-KA19 (WH/BK)	Sensor signal
6	8-KA18 (WH)	Sensor signal
7	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open
8	15-KA19 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
9	33-KA6 (YE/BK)	Switched between: Battery voltage, Ground or Open
10	31-KA19 (BK)	Ground
11	32-KA34 (WH/BK)	Switched between: Battery voltage, Ground or Open