C508a

14631

N416
Master window/door
lock/unlock switch

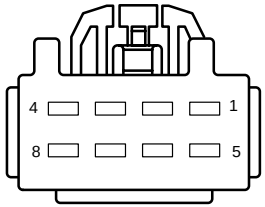

F08165

Pin	Circuit	Circuit function
1	313 (WH/YE)	Window switch, feed, right front, Up
2	400 (LB/BK)	Accessory relay, switched power, output
3	1294 (BN/YE)	Power window switch, driver, to, Front Electronic Module (FEM) (13C788), Down, input
4	1295 (RD/LG)	Power window switch, driver, to, Front Electronic Module (FEM) (13C788), Down, input
5	314 (TN/LB)	Window switch, feed, right front, Down
6	1205 (BK)	Ground
7	1293 (BK/OG)	Power window switch, driver, to, Front Electronic Module (FEM) (13C788), Up, input
8	194 (PK)	Voltage in Run or Accessory (overload protected)

C508b

14631

N416
Master window/door
lock/unlock switch

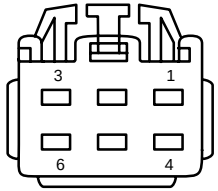

F06213

Pin	Circuit	Circuit function
1	885 (YE/LB)	Window switch, to, Window motor, left rear
2	1299 (LG/YE)	Driver front door lock switch, Door unlock
3	881 (BN)	Window switch, to, Window motor, right rear
4	884 (YE/BK)	Window switch, to, Window motor, left rear
5	1298 (LB/OG)	Driver front door lock switch, Door lock
6	882 (BN/YE)	Window switch, to, Window motor, right rear