-10

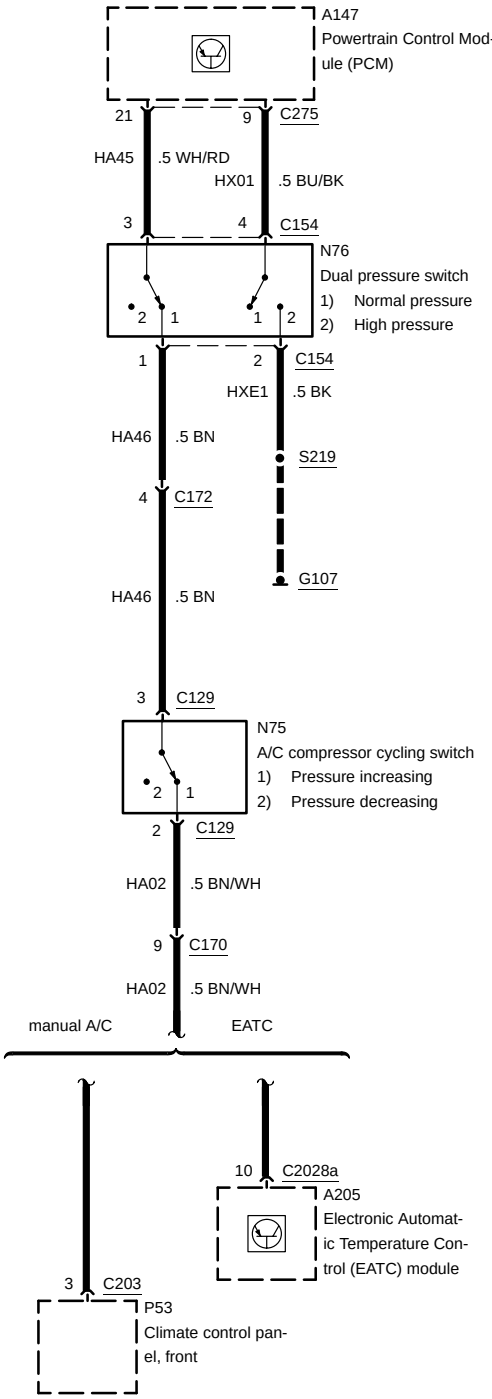
A147
Powertrain Control Module (PCM)
21
9
C275
HA45
.5 WH/RD
HX01
.5 BU/BK
3
4
C154
N76
Dual pressure switch
1) Normal pressure
2) High pressure
2
1
1
2
1
2
C154
HXE1
.5 BK
HA46
.5 BN
S219
4
C172
G107
HA46
.5 BN
3
C129
N75
A/C compressor cycling switch
1) Pressure increasing
2) Pressure decreasing
2
1
2
C129
HA02
.5 BN/WH
9
C170
HA02
.5 BN/WH
manual A/C
EATC
10
C2028a
A205
Electronic Automatic Temperature Control (EATC) module
3
C203
P53
Climate control panel, front