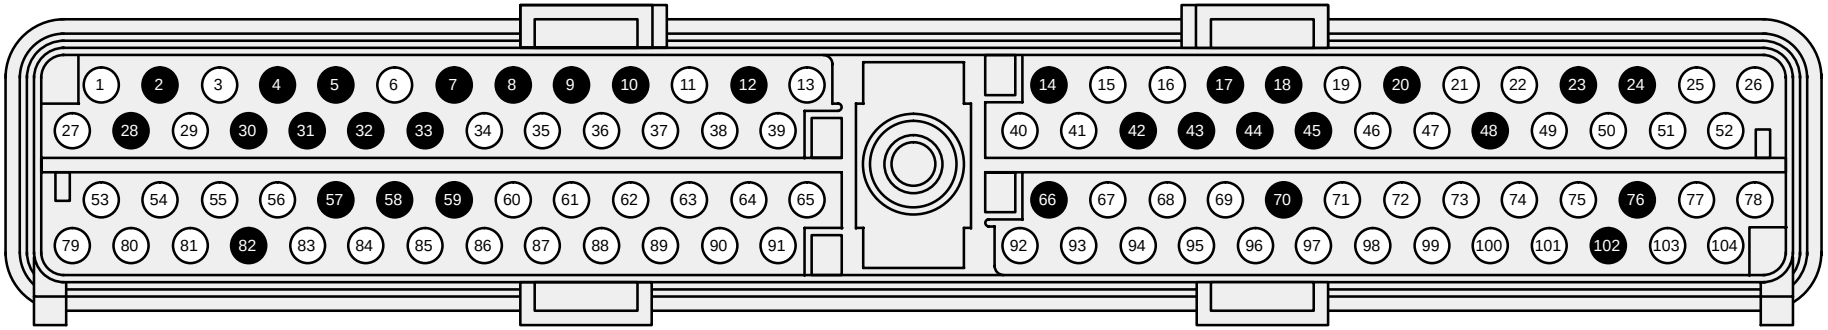

4.6L 2V

C294 (GRAY)

POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Integrated Coil on Plug Cylinder #6	18	–	NOT USED
2	–	NOT USED	19	228 (DB)	Low Fan Control Output
3	570 (BK/WH)	Ground	20	–	NOT USED
4	–	NOT USED	21	349 (DB)	Crankshaft Position (CKP) Sensor (+)
5	–	NOT USED	22	350 (GY)	Crankshaft Position (CKP) Sensor (–)
6	237 (OG/YE)	Shift Solenoid A (SSA)	23	–	NOT USED
7	–	NOT USED	24	–	NOT USED
8	–	NOT USED	25	1205 (BK)	Case Ground
9	–	NOT USED	26	1024 (LG/WH)	To Coil Driver 1 (A)
10	–	NOT USED	27	1021 (LG/YE)	Integrated Coil on Plug Cylinder #5
11	315 (VT/OG)	Shift Solenoid B (SSB)	28	–	NOT USED
12	–	NOT USED	29	224 (TN/WH)	Transmission Control Switch Input
13	107 (VT)	Data Link Connector (DLC) Reprogramming Power Supply Pin	30	–	NOT USED
			31	–	NOT USED
14	–	NOT USED	32	–	NOT USED
15	915 (PK/LB)	SCP Data Bus (–)	33	–	NOT USED
16	914 (TN/OG)	SCP Data Bus (+)	34	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor TR1
17	–	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION
35	392 (RD/LG)	Right Rear Heated Oxygen Sensor (HO2S)
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor
38	354 (LG/RD)	Engine Coolant Temperature (ECT) Sensor Input
39	743 (GY)	Intake Air Temperature (IAT) Sensor Input
40	928 (LB/OG)	Fuel Pump Monitor Input
41	198 (DG/OG)	Air Conditioning Cycling Switch (ACCS) Input
42	–	NOT USED
43	–	NOT USED
44	–	NOT USED
45	–	NOT USED
46	639 (LG/VT)	Cooling Fan
47	360 (BN/PK)	EGR Vacuum Regulator Solenoid
48	–	NOT USED
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor TR2
50	1143 (WH/BK)	Digital Transmission Range (DTR) Sensor TR4
51	570 (BK/WH)	Power Ground (PWRGND)
52	1028 (WH/PK)	Integrated Coil on Plug Cylinder #3
53	1030 (DG/VT)	Integrated Coil on Plug Cylinder #4
54	924 (BN/OG)	Torque Converter Clutch (TCC) Solenoid
55	729 (RD/WH)	Keep Alive Power
56	191 (LG/BK)	Vapor Management Valve
57	–	NOT USED
58	–	NOT USED
59	–	NOT USED
60	74 (GY/LB)	Right Front Heated Oxygen Sensor (HO2S)
61	393 (VT/LG)	Left Rear Heated Oxygen Sensor (HO2S)
62	791 (RD/PK)	Fuel Tank Pressure Transducer
63	141 (RD/PK)	Fuel Rail Pressure Transducer
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor TR3A
65	352 (BN/LG)	Differential Pressure Feedback EGR Sensor
66	–	NOT USED
67	101 (GY/YE)	Evaporative Emission (EVAP) Canister Vent Solenoid
68	239 (WH/OG)	Vehicle Speed Sensor (VSS) Signal
69	331 (PK/YE)	WOT A/C Cutout Relay
70	–	NOT USED
71	361 (RD)	Vehicle Power (VPWR)
72	561 (TN/RD)	Fuel Injector #7 Output
73	559 (TN/BK)	Fuel Injector #5 Output
74	557 (BN/YE)	Fuel Injector #3 Output
75	555 (TN)	Fuel Injector #1 Output
76	–	NOT USED
77	570 (BK/WH)	Power Ground (PWRGND)
78	1027 (PK/LB)	Integrated Coil on Plug Cylinder #7
79	1029 (WH/RD)	Integrated Coil on Plug Cylinder #8
80	922 (WH/RD)	Fuel Pump Output
81	925 (WH/YE)	Electronic Pressure Control (EPC)
82	–	NOT USED
83	264 (WH/LB)	Idle Air Control (IAC) Valve
84	970 (DG/WH)	Output Shaft Speed (OSS) Sensor (+)
85	282 (DB/OG)	Camshaft Position (CMP) Sensor
86	439 (TN/LG)	A/C High Pressure Switch
87	94 (RD/BK)	Left Front Heated Oxygen Sensor (HO2S)
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Voltage Reference (VREF)
91	359 (GY/RD)	Signal Return (SIGRTN)
92	511 (LG)	Brake Pedal Position (BPP) Switch Input
93	387 (RD/WH)	Right Front Heated Oxygen Sensor Heater #11
94	388 (YE/LB)	Left Front Heated Oxygen Sensor Heater #21
95	389 (WH/BK)	Right Rear Heated Oxygen Sensor (HO2S) Heater #12
96	390 (TN/YE)	Left Rear Heated Oxygen Sensor (HO2S) Output Heater #22
97	361 (RD)	Vehicle Power (VPWR)
98	562 (LB)	Fuel Injector #8 Output
99	560 (LG/OG)	Fuel Injector #6 Output
100	558 (BN/LB)	Fuel Injector #4 Output
101	556 (WH)	Fuel Injector #2 Output
102	–	NOT USED
103	570 (BK/WH)	Power Ground (PWRGND)
104	1026 (PK/WH)	Integrated Coil on Plug Cylinder #2