C359

14B084

A224
Heated seat mod-
ule, driver side front

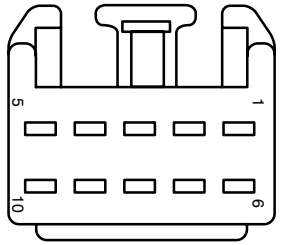

F10063

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
2	1020 (DG/VT)	Climate controlled seat module
3	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat back heater, driver side, heater, return
6	295 (LB/PK)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
8	57 (BK)	Ground
9	–	not used
10	461 (OG)	Electronic Automatic Temperature Control (EATC) mod-ule (19980), to, Heated seat module, driver side front

C360

14B084

N216
Seat adjust switch,
driver side front
(14A701)

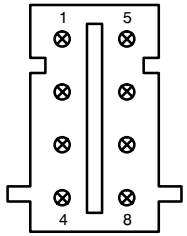

F08245

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	981 (RD/WH)	Fwd/Rwd motor, Forward
3	566 (DG)	Voltage supplied at all times (overload protected)
4	983 (RD/LG)	Rear height motor, Up
5	980 (YE/WH)	Fwd/Rwd motor, Rearward
6	979 (RD/LB)	Front height motor, Up
7	982 (YE/LG)	Rear height motor, Down
8	990 (YE/LB)	Front height motor, Down