C801

14632

N110
Window adjust switch, right rear

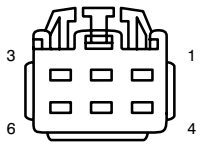

F06213

Pin	Circuit	Circuit Function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	882 (BN/YE)	Window switch to, Window motor, right rear
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	881 (BN)	Window switch to, Window motor, right rear
6	319 (YE/BK)	Window switch, feed, right rear, Up

C802

14632

Y19
Speaker, right rear

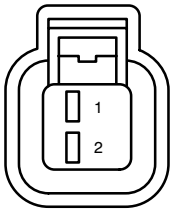

F02069

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Speaker, right rear +
2	803 (BN/PK)	Speaker, right rear –

C803

14632

M117
Power window motor, right rear

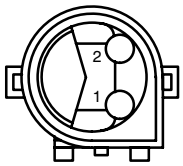

F02004

Pin	Circuit	Circuit Function
1	882 (BN/YE)	Window switch to, Window motor, right rear
2	881 (BN)	Window switch to, Window motor, right rear

C804

14632

M65
Door lock actuator, right rear

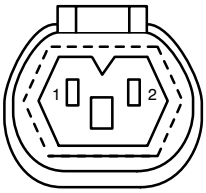

F02227

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C820a

14632

N238
Door ajar switch, passenger side rear

F01065

Pin	Circuit	Circuit Function
1	760 (PK/LB)	Door ajar switch, right rear

C820b

14632

N238
Door ajar switch, passenger side rear

F01067

Pin	Circuit	Circuit Function
1	57 (BK)	Ground

C904

13B472

E174
High mounted stoplamp

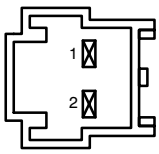

F02077

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	569 (DG)	Brake pedal position switch, to stoplamps