C354

14A333

Y19
Speaker, right rear
(18808)



F02263

Pin	Circuit	Circuit function
1	RB15 (BU)	Speaker, right rear (18808)
2	RB21 (BU/BK)	Speaker, right rear (18808)

C355 (BN)

14N104

Y17
Speaker, left rear
(18808)



F02129

Pin	Circuit	Circuit function
1	RB11 (GN)	Speaker, left rear (18808)
2	RB12 (BU/YE)	Speaker, left rear (18808)

C356 (WH)

14A318

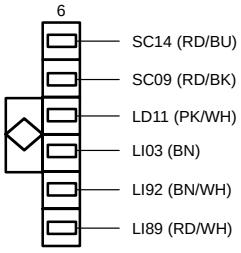

F06237

14N104

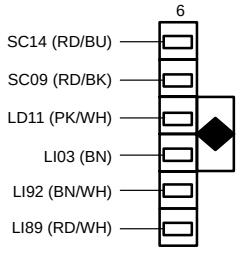

F06237

C357 (BN)

14A699

M214
Power seat motor
assembly, left

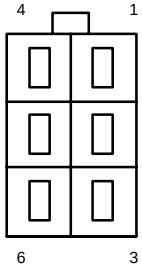

F06197

Pin	Circuit	Circuit function
1	13 (PK)	Backrest forward
	(GY)	Backrest forward
2	12 (OG)	Fwd/Rwd motor, Forward
	(OG)	Fwd/Rwd motor, Forward
3	15 (GY)	Fwd/Rwd motor, Rearward
	(GN)	Fwd/Rwd motor, Rearward
4	14 (BN)	Backrest rearward
	(YE)	Backrest rearward
5	16 (YE)	Front height motor, Down
	(PK)	Front height motor, Down
6	11 (GN)	Front height motor, Up
	(BN)	Front height motor, Up