C201e

14A005

Front Electronic Module (FEM) (13C788)

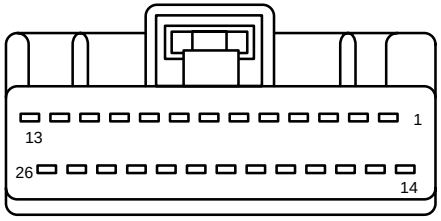

F26013

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	8-AA30 (WH)	Luggage compartment lid release switch, switch sense
5	8-AL18 (WH/RD)	Adjustable pedal memory potentiometer, signal
6	–	not used
7	8-AD19 (WH/RD)	Exterior rear view mirror, passenger side (17683) - Right/ Left mirror movement, Sensor
8	7-AD19 (YE/RD)	Exterior rear view mirror, passenger side (17683) - Reference voltage
9	–	not used
10	–	not used
11	10-AD19 (GY/RD)	Exterior rear view mirror, passenger side (17683) - Up/ Down mirror movement, Sensor
12	34-AL18 (BU/RD)	Adjustable pedal motor (2C429), Forward +/-
13	–	not used
14	–	not used

Pin	Circuit	Circuit function
15	31S-GL47 (BK/BU)	Door ajar switch, right front, switch sense
16	–	not used
17	–	not used
18	9-AL18 (BN/RD)	Adjustable pedal memory potentiometer, Signal return
19	–	not used
20	34-AD11 (BU/OG)	Exterior rear view mirror, passenger side (17683) - Up/ Down mirror movement, motor +/-
21	35-AD11 (VT/WH)	Exterior rear view mirror, passenger side (17683) - Up/ Down mirror movement, motor +/-
22	9-AD19 (BN/RD)	Exterior rear view mirror, passenger side (17683) - Signal return
23	32-AD10 (WH/BK)	Exterior rear view mirror, passenger side (17683) - Right/ Left mirror movement, motor +/-
24	33-AD10 (YE/BK)	Exterior rear view mirror, passenger side (17683) - Right/ Left mirror movement, motor +/-
25	–	not used
26	35-AL18 (VT/BU)	Adjustable pedal motor (2C429), Rearward +/-