C802

14A005

Speaker, right rear (18808)

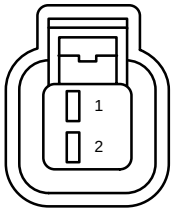

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Audio signal positive
2	803 (BN/PK)	Audio signal negative

C803

14A005

Power window motor, right rear (23394)

Excursion

F02457

Pickup

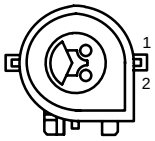

F02469

Pin	Circuit	Circuit function
1	882 (BN/YE)	Window switch, to, Window motor, right rear
2	881 (BN)	Window switch, to, Window motor, right rear

C804

14A005

Door lock actuator, right rear (218A42)

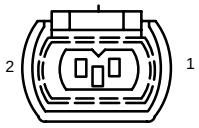

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C813

14A005

Speaker, right middle

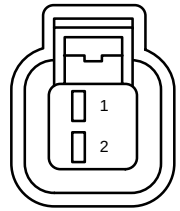

F02069

Pin	Circuit	Circuit function
1	825 (TN/LG)	Audio signal positive
2	803 (BN/PK)	Audio signal negative

C820

14A005

Door ajar switch, passenger side rear (14018)

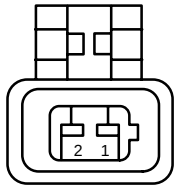

F02117

Pin	Circuit	Circuit function
1	346 (BK/WH)	switch sense, without remote keyless entry
	395 (GY/OG)	switch sense, without remote keyless entry – 4 speaker audio system
	760 (PK/LB)	switch sense, with remote keyless entry
2	57 (BK)	Ground, with remote keyless entry
	345 (BK/PK)	switch sense, without remote keyless entry
	396 (BK/WH)	switch sense, without remote keyless entry – 4 speaker audio system