
C220b

14A032

A30
Instrument cluster

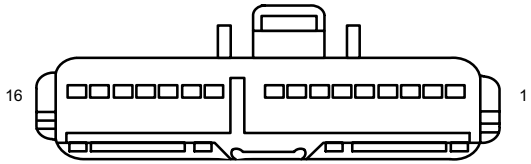


Pin	Circuit	Circuit function
1	19 (LB/RD)	Instrument illumination, feed
2	–	not used
3	729 (RD/WH)	Voltage supplied at all times (overload protected)
4	–	not used
5	1203 (BK/LB)	Ground
6	31 (WH/RD)	Engine oil pressure indicator, control
7	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
8	1203 (BK/LB)	Ground
9	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
10	29 (YE/WH)	Fuel pump/fuel gauge sender
11	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
12	648 (WH/PK)	Tachometer, signal
13	–	not used
14	2 (WH/LB)	Turn lamps, feed, right front
15	–	not used
16	3 (LG/WH)	Turn lamps, feed, left front

C220c

14A032

A30
Instrument cluster

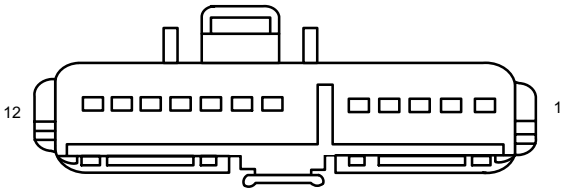

Pin	Circuit	Circuit function
1	–	not used
2	433 (DG/OG)	Door ajar indicator
3	977 (VT/WH)	Brake indicator, control
4	–	not used
5	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
6	1091 (LB)	Inertia Fuel Shutoff (IFS) switch (9D362), to, Instrument cluster
7	–	not used
8	12 (LG/BK)	Power, Hot with High Beams on
9	–	not used
10	–	not used
11	603 (DG)	Anti–lock brake indicator, control
12	57 (BK)	Ground