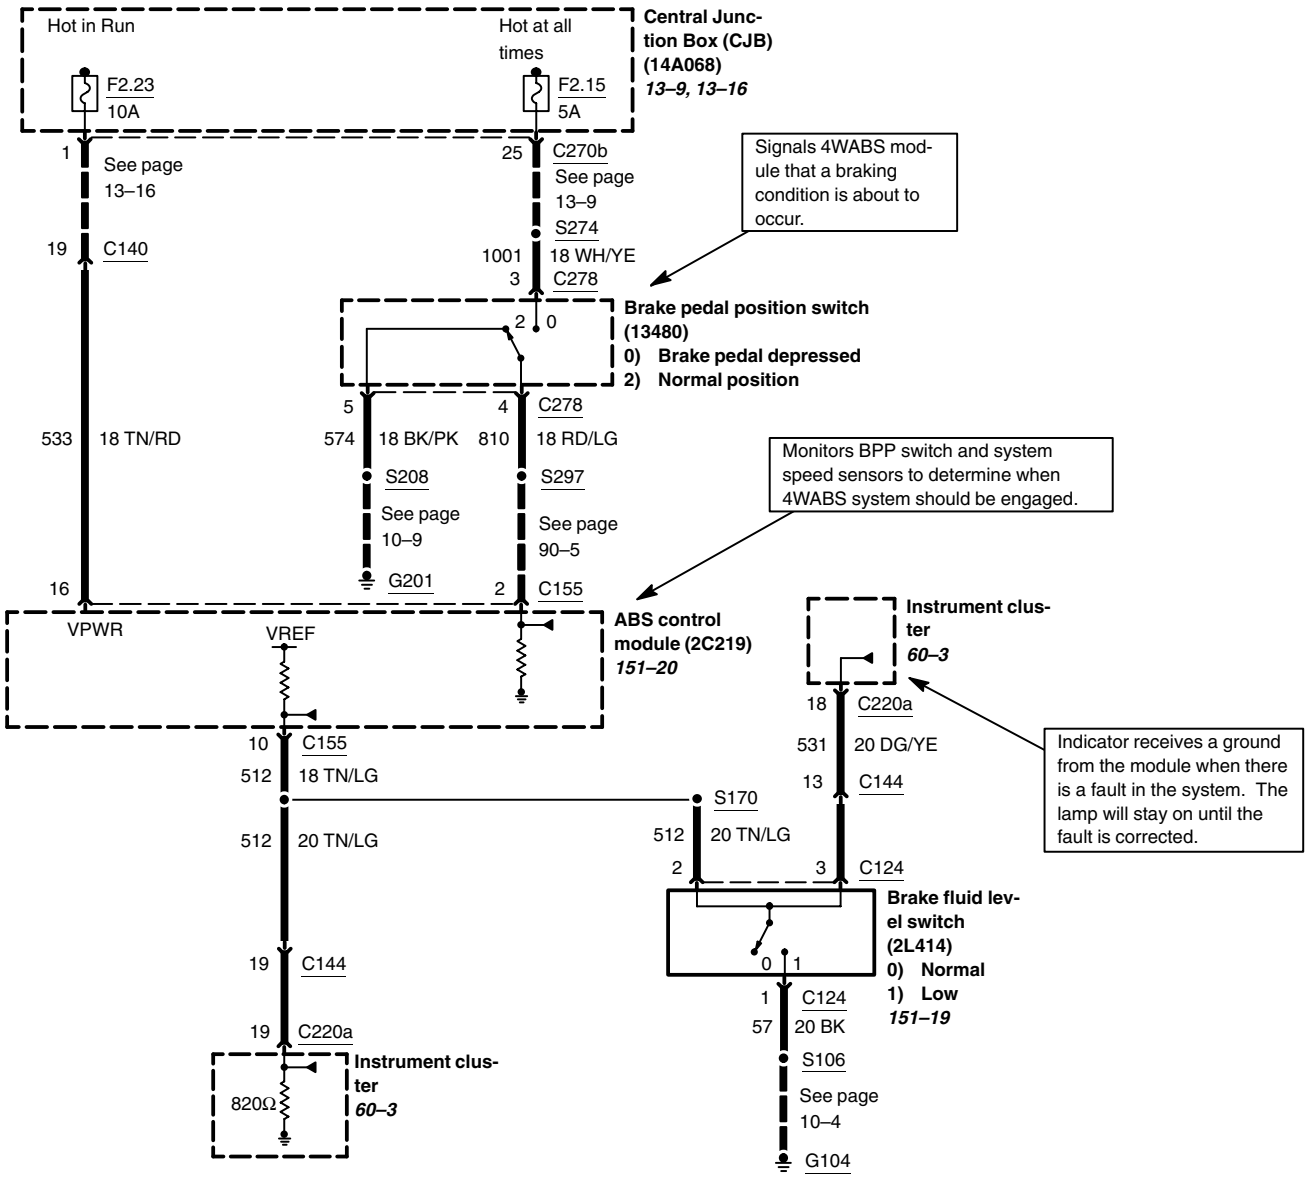
Hot in Run
Hot at all times
Central Junction Box (CJB) (14A068)
13–9, 13–16
F2.23
10A
F2.15
5A
1
See page 13–16
19
C140
25
C270b
See page 13–9
S274
1001
18 WH/YE
3
C278
Signals 4WABS module that a braking condition is about to occur.
Brake pedal position switch (13480)
0) Brake pedal depressed
2) Normal position
2
0
5
4
C278
533
18 TN/RD
574
18 BK/PK
810
18 RD/LG
S208
S297
See page 10–9
See page 90–5
G201
Monitors BPP switch and system speed sensors to determine when 4WABS system should be engaged.
16
2
C155
VPWR
VREF
ABS control module (2C219)
151–20
Instrument cluster
60–3
18
C220a
531
20 DG/YE
13
C144
Indicator receives a ground from the module when there is a fault in the system. The lamp will stay on until the fault is corrected.
10
C155
512
18 TN/LG
S170
512
20 TN/LG
2
3
C124
512
20 TN/LG
Brake fluid level switch (2L414)
0) Normal
1) Low
151–19
0
1
19
C144
1
C124
19
C220a
57
20 BK
S106
820Ω
Instrument cluster
60–3
See page 10–4
G104