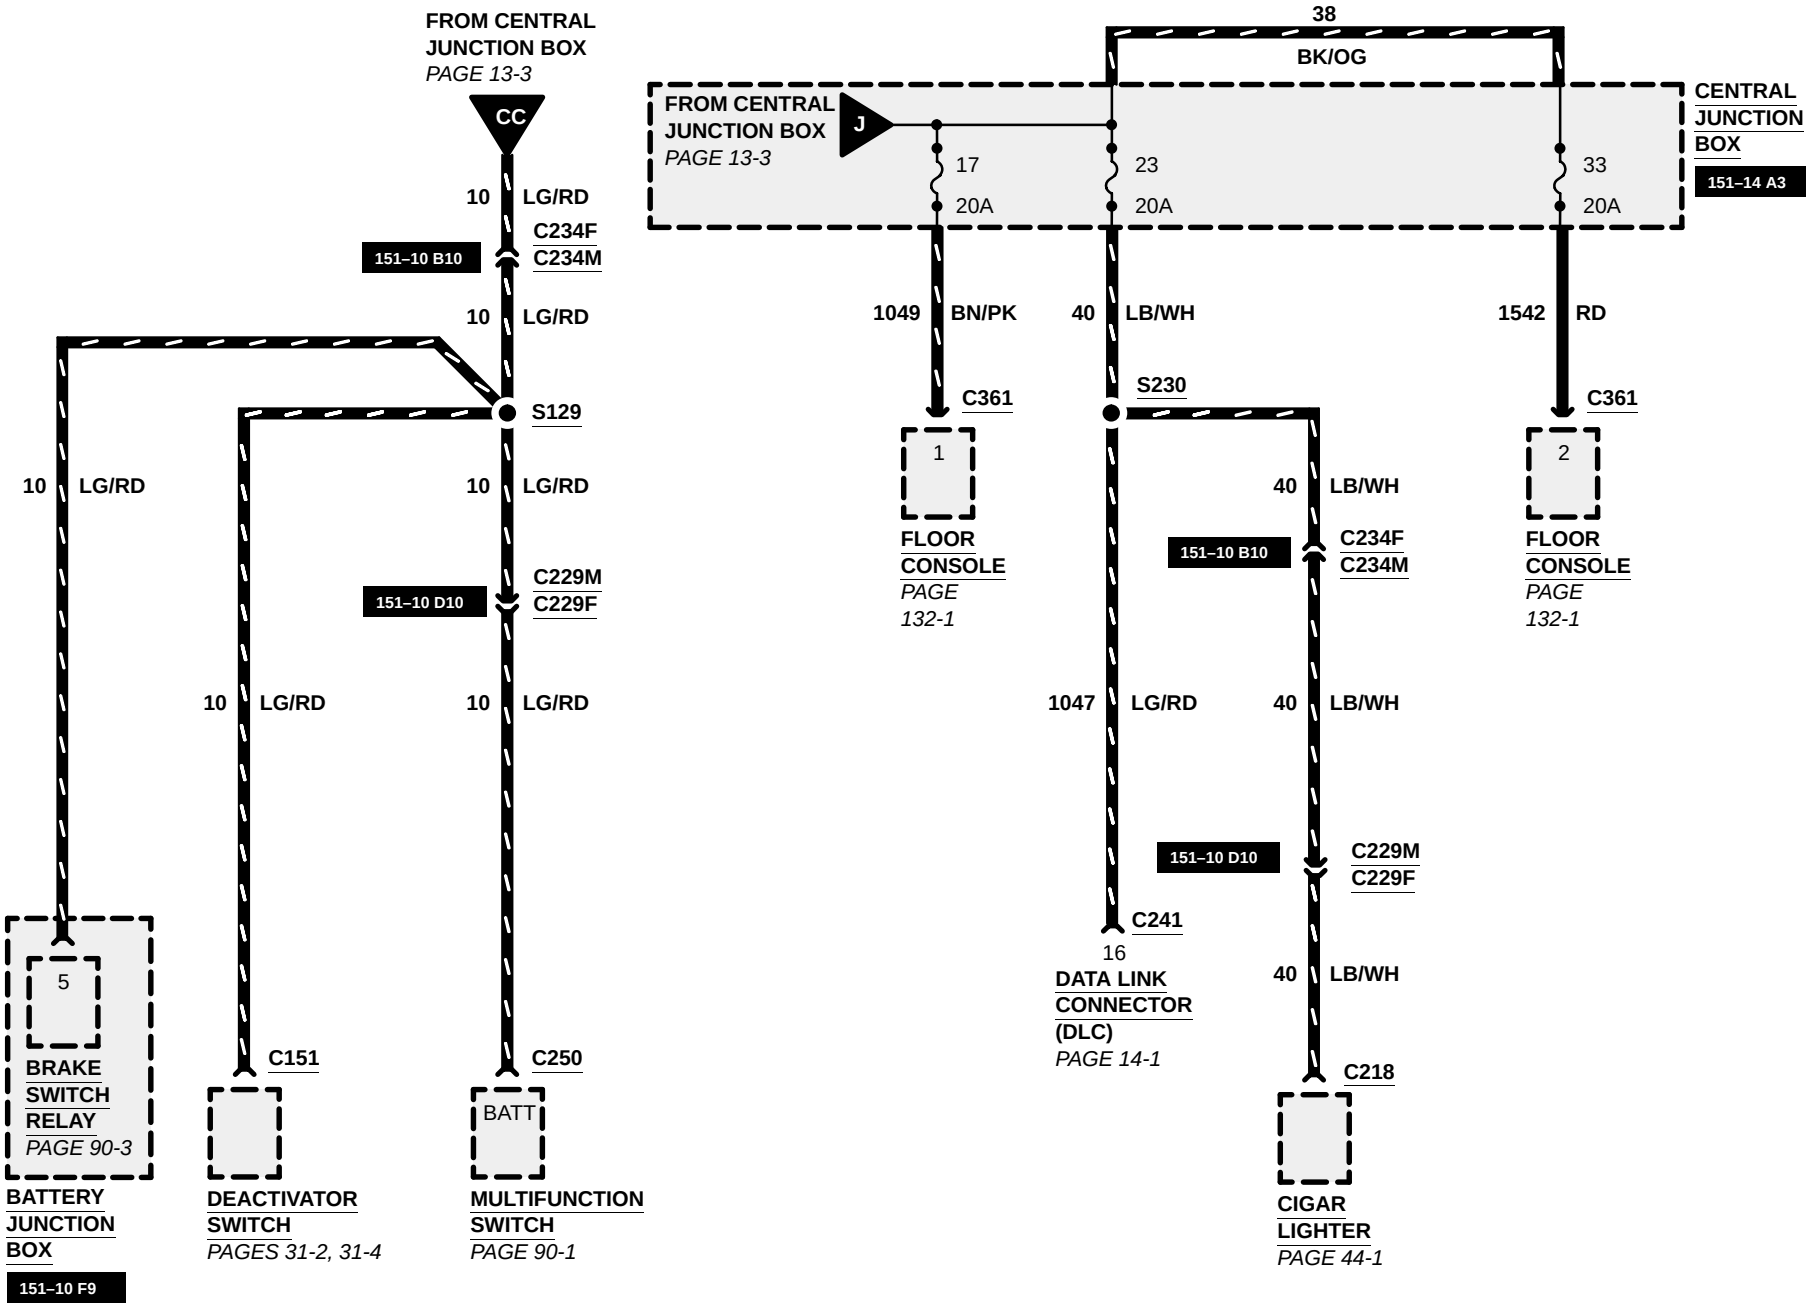
FROM CENTRAL JUNCTION BOX
PAGE 13-3
CC
10 LG/RD
C234F
C234M
151–10 B10
10 LG/RD
S129
10 LG/RD
10 LG/RD
C229M
C229F
151–10 D10
10 LG/RD
10 LG/RD
5
BRAKE SWITCH RELAY
PAGE 90-3
BATTERY JUNCTION BOX
151–10 F9
C151
DEACTIVATOR SWITCH
PAGES 31-2, 31-4
C250
BATT
MULTIFUNCTION SWITCH
PAGE 90-1
38
BK/OG
FROM CENTRAL JUNCTION BOX
PAGE 13-3
J
17
20A
23
20A
33
20A
CENTRAL JUNCTION BOX
151–14 A3
1049 BN/PK
40 LB/WH
1542 RD
C361
1
FLOOR CONSOLE
PAGE 132-1
S230
C361
2
FLOOR CONSOLE
PAGE 132-1
40 LB/WH
C234F
C234M
151–10 B10
1047 LG/RD
40 LB/WH
C241
16
DATA LINK CONNECTOR (DLC)
PAGE 14-1
151–10 D10
C229M
C229F
40 LB/WH
C218
CIGAR LIGHTER
PAGE 44-1