C2041

14401

A208
Restraints Control Module (RCM)

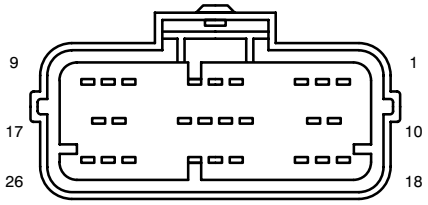

F26008

Pin	Circuit	Circuit Function
1	–	not used
2	364 (BK/LG)	Voltage in Run (overload protected)
3	614 (GY/OG)	Driver air bag, feed, monitor
4	615 (GY/WH)	Driver air bag, return
5	70 (LB/WH)	ISO Bus
6	607 (LB/OG)	Passenger air bag, feed, monitor
7	616 (PK/BK)	Passenger air bag, return
8	1112 (WH/LB)	Passenger Air bag Deactivation (PAD) switch, input
9	1113 (YE/LG)	Passenger Air bag Deactivation (PAD) switch, indicator, control
10	–	not used
11	–	not used
12	–	not used
13	1001 (WH/YE)	Voltage supplied in Start (overload protected)
14	–	not used
15	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
16	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
17	–	not used
18	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
19	–	not used
20	608 (BK/YE)	Air bag indicator, control
21	649 (BK/OG)	Air bag, dedicated ground
22	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
23	–	not used
24	–	not used
25	–	not used
26	1083 (LB/BK)	Air bag, tone driver

C2047

14401

K2
Indicator flasher relay

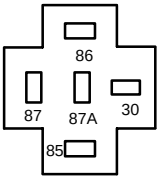

F05016

Pin	Circuit	Circuit Function
87	44 (LB)	Turn signal flasher to turn signal switch
87A	385 (WH/RD)	Voltage supplied at all times (overload protected)
85	383 (RD/WH)	Emergency warning flasher, feed
86	57 (BK)	Ground
30	8 (OG/YE)	Voltage in Run (overload protected)

C2048

14401

K115
Battery saver relay

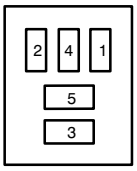

F05064

Pin	Circuit	Circuit Function
1	792 (TN/YE)	Battery saver relay - fused feed
	792 (TN/YE)	Battery saver relay - fused feed
2	1005 (VT/OG)	Generic Electronic Module (GEM) to, Battery saver relay - output
3	705 (LG/OG)	Battery saver relay, switched power
4	–	not used
5	792 (TN/YE)	Battery saver relay - fused feed