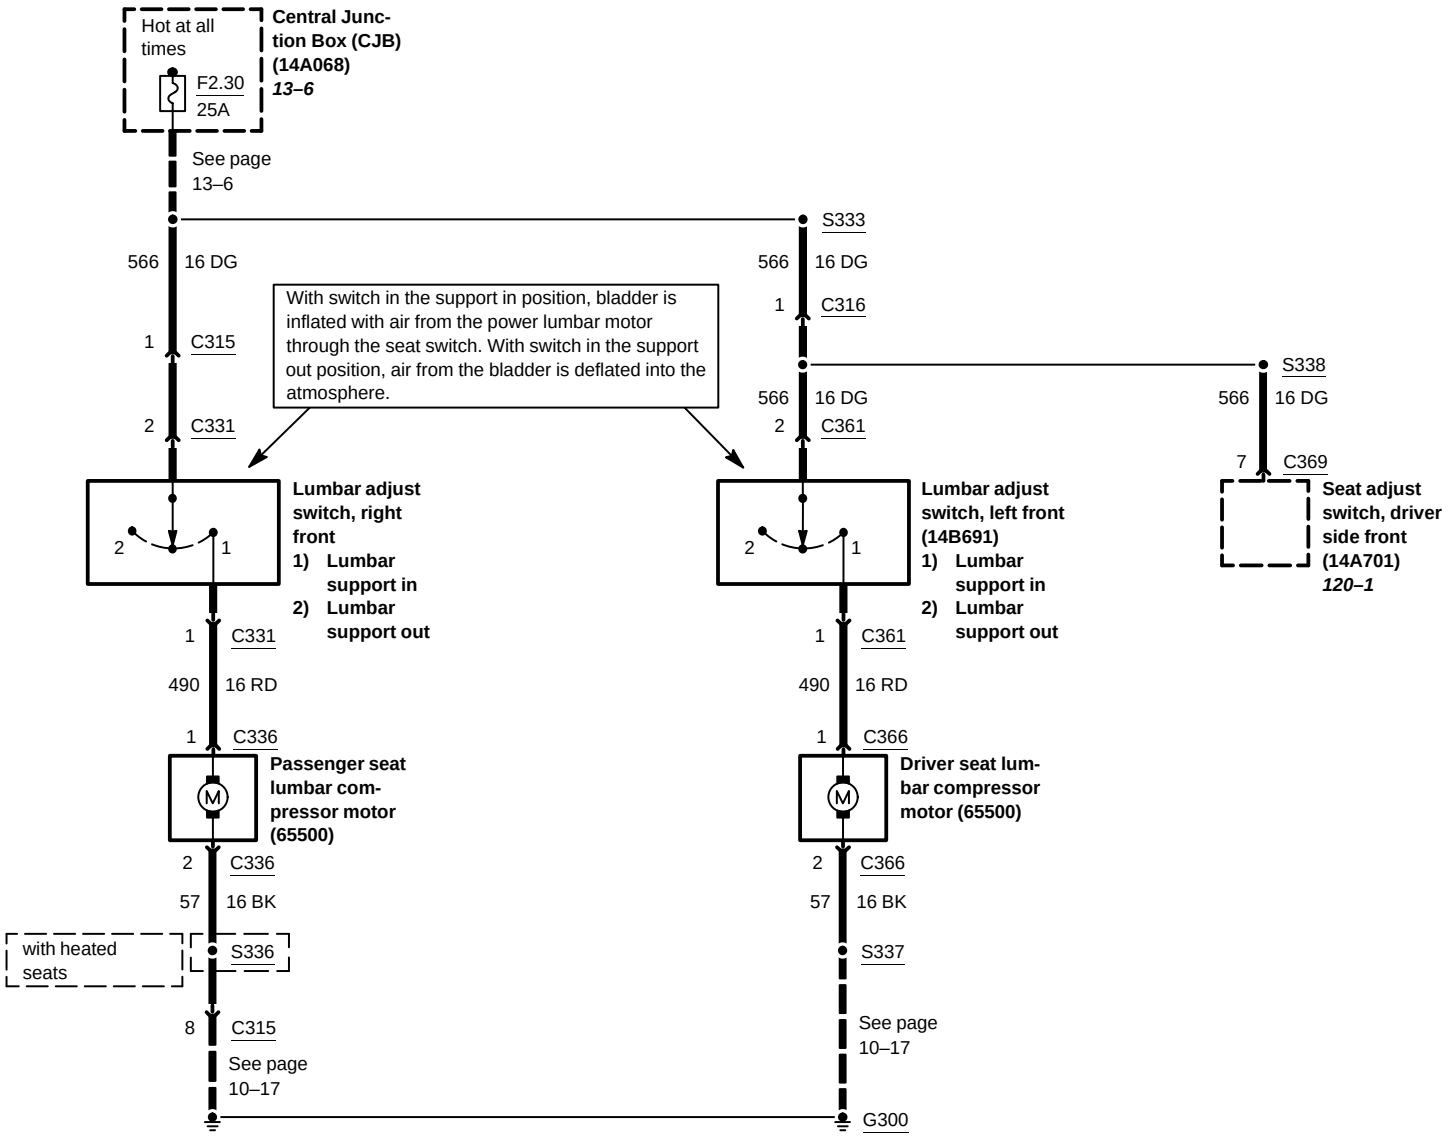
Hot at all times
F2.30
25A
Central Junction Box (CJB) (14A068)
13–6
See page 13–6
566 16 DG
1 C315
2 C331
S333
566 16 DG
1 C316
With switch in the support in position, bladder is inflated with air from the power lumbar motor through the seat switch. With switch in the support out position, air from the bladder is deflated into the atmosphere.
S338
566 16 DG
2 C361
566 16 DG
7 C369
Seat adjust switch, driver side front (14A701)
120–1
Lumbar adjust switch, right front
1) Lumbar support in
2) Lumbar support out
Lumbar adjust switch, left front (14B691)
1) Lumbar support in
2) Lumbar support out
1 C331
490 16 RD
1 C336
1 C361
490 16 RD
1 C366
Passenger seat lumbar compressor motor (65500)
Driver seat lumbar compressor motor (65500)
2 C336
57 16 BK
2 C366
57 16 BK
with heated seats
S336
S337
8 C315
See page 10–17
See page 10–17
G300