C202

14402

N442
Multifunction switch



F12006

C203

14402

N201
Speed control
switch

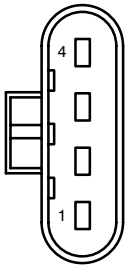

F12077

C204

14401

N409
Exterior rear view
mirror switch
(17B676)

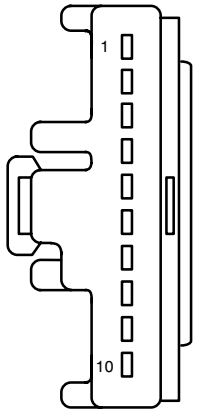

F10061

Pin	Circuit	Circuit function
1	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	32-AD32 (WH/RD)	Switched between: Battery voltage, Ground or Open
3	31-AD12 (BK)	Ground
4	33-AD12 (YE)	Switched between: Battery voltage, Ground or Open
5	31-LH50 (BK)	Ground
6	64S-LH50 (BU/YE)	Variable DC voltage (not overload protected), Switched
7	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)
8	34-AD31 (BU/WH)	Switched between: Battery voltage, Ground or Open
9	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open
10	–	not used