C254

14401

Glove box lamp
(14413)



F02431

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	54 (LG/YE)	relay control battery feed

C256

14401

Passenger air bag
module (15044A74)

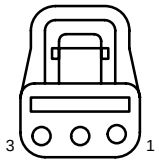

F03035

Pin	Circuit	Circuit function
1	616 (PK/BK)	Passenger air bag, return
2	–	not used
3	607 (LB/OG)	Passenger air bag, feed, monitor

C257

14A005

Clutch pedal posi-
tion switch

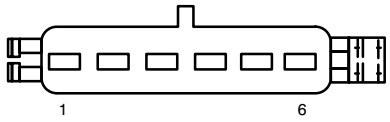

F06084

Pin	Circuit	Circuit function
1	92 (LB/YE)	Voltage supplied in Start (overload protected)
2	1093 (TN/RD)	switched power, to starter motor relay
3	306 (TN/LB)	speed control, Deactivator switch
4	810 (RD/LG)	Brake pedal position switch (13480), input – gasoline engines
4	810 (RD/LG)	Voltage supplied in Start and Run (overload protected) – Diesel
5	33 (WH/PK)	Voltage supplied in Start (overload protected)
6	199 (LB/YE)	Clutch pedal position switch, to, Powertrain Control Module (PCM) (12A650)