C369

14C719

N216
Seat adjust switch, driver side front (14A701)

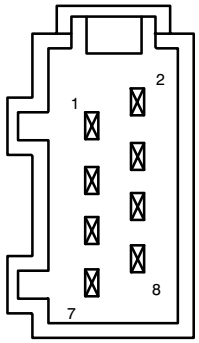

F08161

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	979 (RD/LB)	Front height motor, Up
3	983 (RD/LG)	Rear height motor, Up
4	980 (YE/WH)	Fwd/Rwd motor, Rearward
5	982 (YE/LG)	Rear height motor, Down
6	978 (YE/LB)	Front height motor, Up
7	517 (BK/WH)	Voltage supplied at all times (overload protected)
8	981 (RD/WH)	Fwd/Rwd motor, Forward

C380

14B079

O40
Power point, console (19N236)

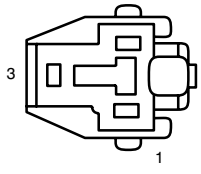

F03163

Pin	Circuit	Circuit function
1	1049 (BN/PK)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C395

14A005
14A488

Y17
Speaker, left rear (18808)

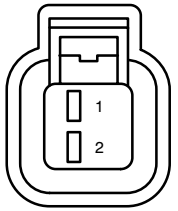

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) -

C396

14A005
14A488

Y19
Speaker, right rear (18808)

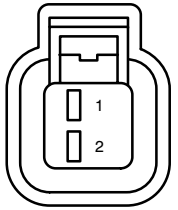

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) -

C402a

18C673

R19
Rear window defrost grid (18C618)



F01029

Pin	Circuit	Circuit function
1	185 (BK)	Rear window defrost relay, switched power