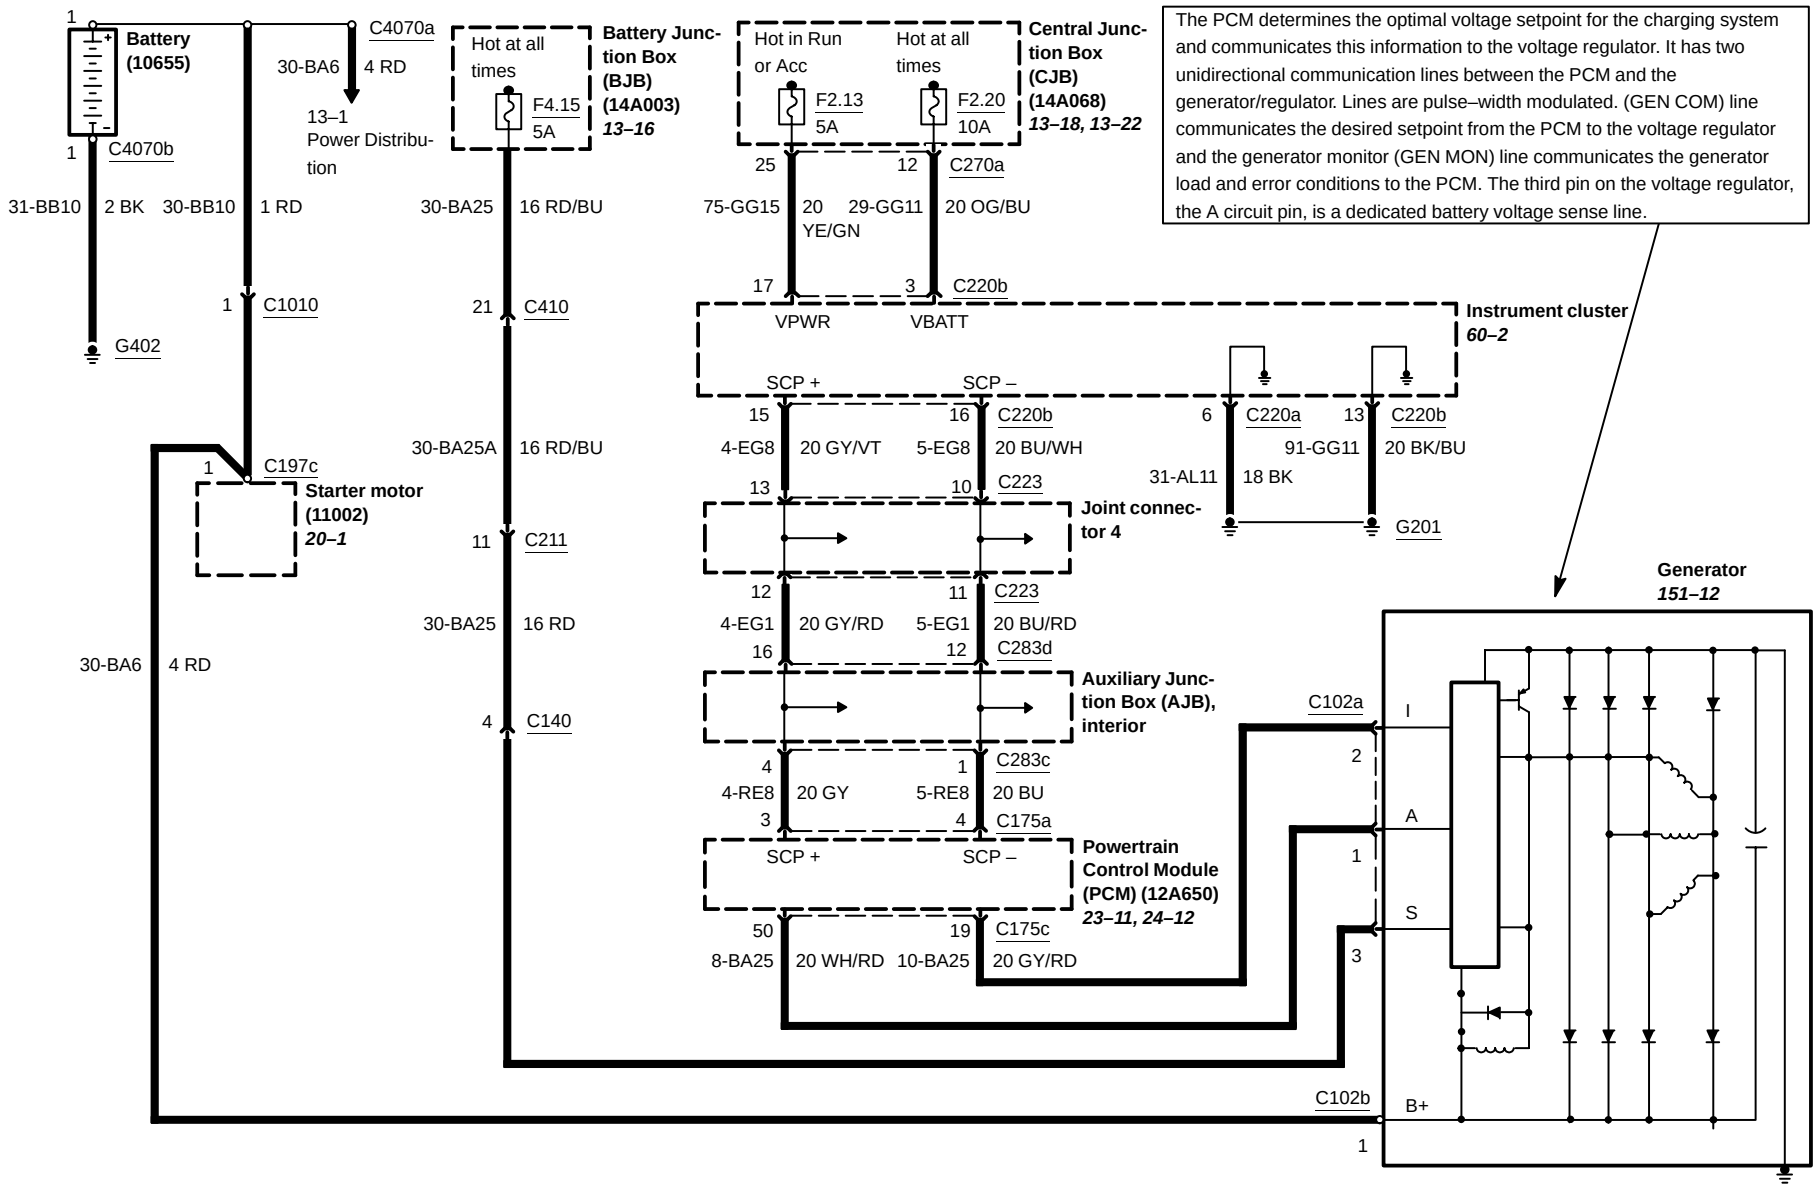
The PCM determines the optimal voltage setpoint for the charging system and communicates this information to the voltage regulator. It has two unidirectional communication lines between the PCM and the generator/regulator. Lines are pulse–width modulated. (GEN COM) line communicates the desired setpoint from the PCM to the voltage regulator and the generator monitor (GEN MON) line communicates the generator load and error conditions to the PCM. The third pin on the voltage regulator, the A circuit pin, is a dedicated battery voltage sense line.
Battery (10655)
C4070a
30-BA6 4 RD
13–1 Power Distribution
C4070b
31-BB10 2 BK
30-BB10 1 RD
G402
C1010
C197c
Starter motor (11002) 20–1
30-BA6 4 RD
Battery Junction Box (BJB) (14A003) 13–16
Hot at all times
F4.15 5A
30-BA25 16 RD/BU
C410
30-BA25A 16 RD/BU
C211
30-BA25 16 RD
C140
Central Junction Box (CJB) (14A068) 13–18, 13–22
Hot in Run or Acc
F2.13 5A
Hot at all times
F2.20 10A
C270a
75-GG15 20 YE/GN
29-GG11 20 OG/BU
C220b
VPWR
VBATT
Instrument cluster 60–2
SCP +
SCP –
C220b
4-EG8 20 GY/VT
5-EG8 20 BU/WH
C223
Joint connector 4
C223
4-EG1 20 GY/RD
5-EG1 20 BU/RD
C283d
Auxiliary Junction Box (AJB), interior
C283c
4-RE8 20 GY
5-RE8 20 BU
C175a
SCP +
SCP –
Powertrain Control Module (PCM) (12A650) 23–11, 24–12
C175c
8-BA25 20 WH/RD
10-BA25 20 GY/RD
C220a
C220b
91-GG11 20 BK/BU
31-AL11 18 BK
G201
Generator 151–12
C102a
C102b
I
A
S
B+