C121

12B637

N96
Power steering
pressure switch

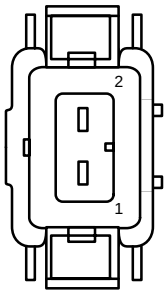

F02203

Pin	Circuit	Circuit Function
1	330 (YE/LG)	Power steering pressure switch, input
2	359 (GY/RD)	signal, return

C122

14290

M87
Speed control servo

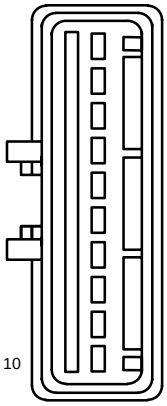

F10011

Pin	Circuit	Circuit Function
1	203 (OG/LB)	Cruise set, indicator, control
2	–	not used
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	810 (RD/LG)	Brake pedal position switch, input
5	916 (LG)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	1087 (OG)	Voltage in Run (overload protected)
8	–	not used
9	248 (TN/OG)	Deactivator switch, input
10	57 (BK)	Ground

C123

14402

Y134
EVAP canister
purge valve

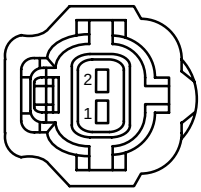

F02027

Pin	Circuit	Circuit Function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	101 (GY/YE)	EVAP canister purge valve