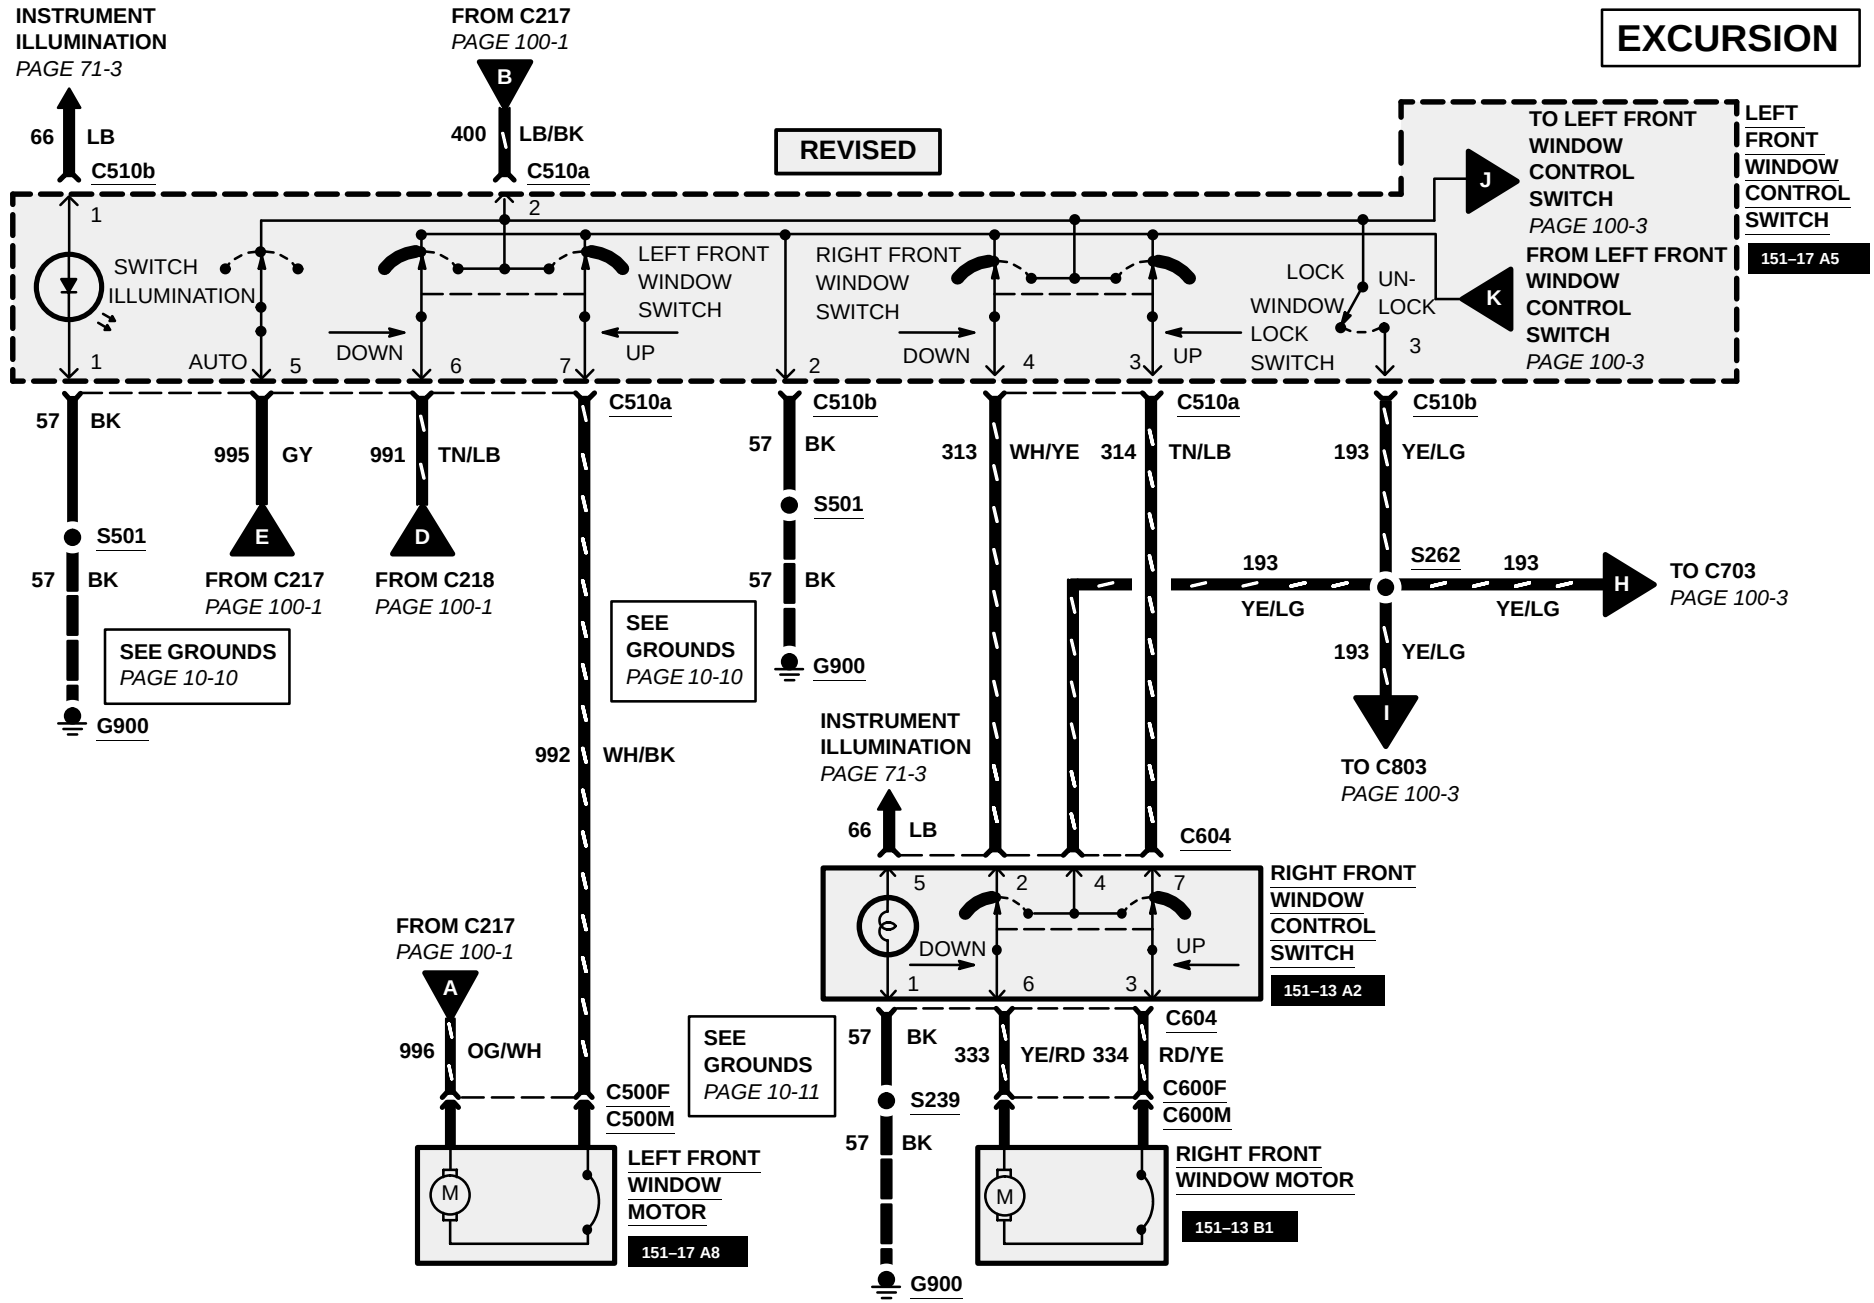
EXCURSION
REVISED
INSTRUMENT ILLUMINATION
PAGE 71-3
66 LB
C510b
FROM C217
PAGE 100-1
B
400 LB/BK
C510a
SWITCH ILLUMINATION
LEFT FRONT WINDOW SWITCH
RIGHT FRONT WINDOW SWITCH
LOCK WINDOW LOCK SWITCH
UN-LOCK
DOWN
UP
AUTO
TO LEFT FRONT WINDOW CONTROL SWITCH
PAGE 100-3
J
LEFT FRONT WINDOW CONTROL SWITCH
151–17 A5
FROM LEFT FRONT WINDOW CONTROL SWITCH
PAGE 100-3
K
57 BK
995 GY
991 TN/LB
C510a
C510b
313 WH/YE
314 TN/LB
193 YE/LG
S501
E
D
FROM C217
PAGE 100-1
FROM C218
PAGE 100-1
SEE GROUNDS
PAGE 10-10
G900
S262
193 YE/LG
TO C703
PAGE 100-3
H
TO C803
PAGE 100-3
I
992 WH/BK
INSTRUMENT ILLUMINATION
PAGE 71-3
C604
RIGHT FRONT WINDOW CONTROL SWITCH
151–13 A2
A
996 OG/WH
C500F
C500M
LEFT FRONT WINDOW MOTOR
151–17 A8
SEE GROUNDS
PAGE 10-11
333 YE/RD
334 RD/YE
C600F
C600M
S239
RIGHT FRONT WINDOW MOTOR
151–13 B1
M