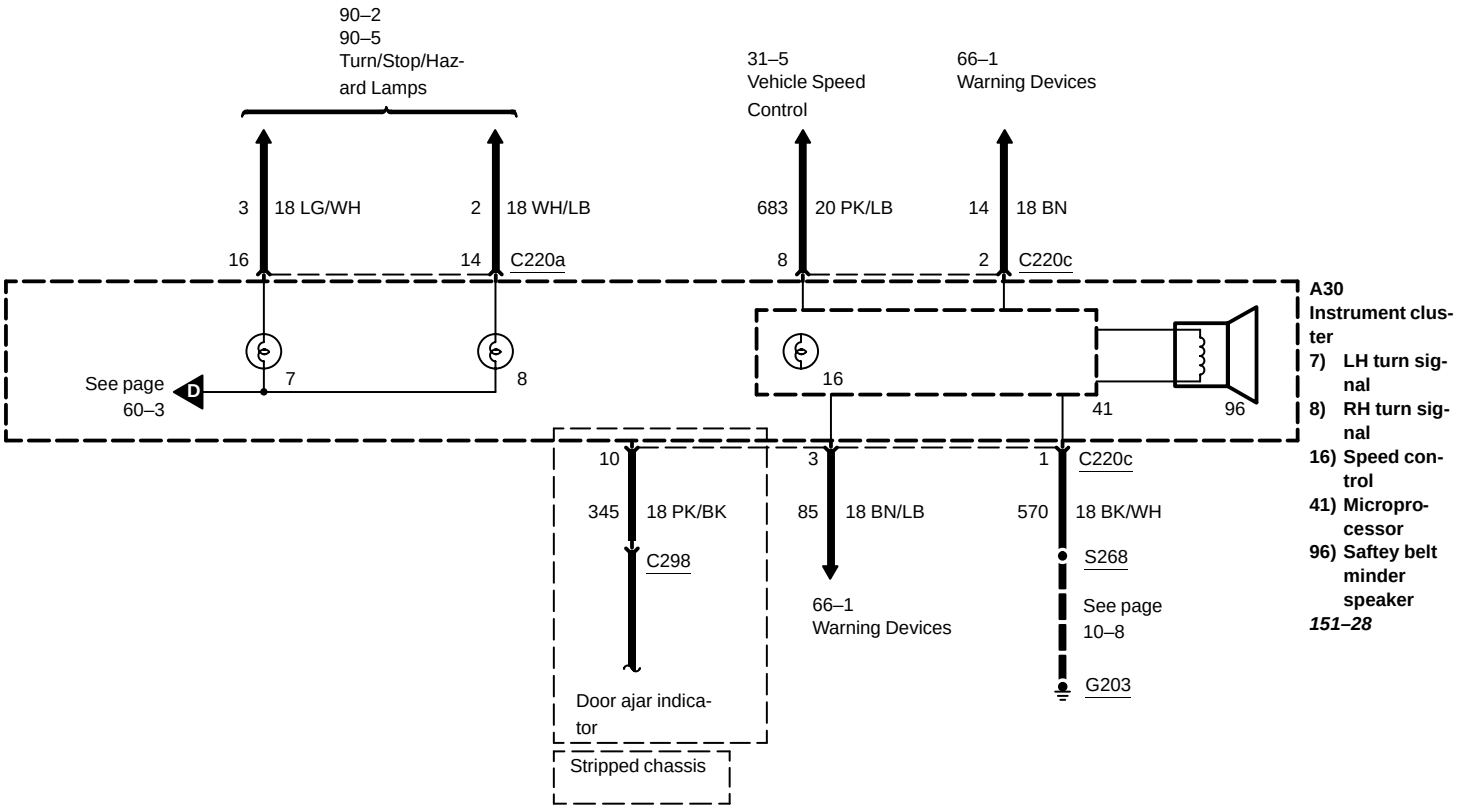
90–2
90–5
Turn/Stop/Haz-
ard Lamps
31–5
Vehicle Speed
Control
66–1
Warning Devices
3
18 LG/WH
2
18 WH/LB
683
20 PK/LB
14
18 BN
16
14
C220a
8
2
C220c
A30
Instrument clus-
ter
7) LH turn sig-
nal
8) RH turn sig-
nal
16) Speed con-
trol
41) Micropro-
cessor
96) Saftey belt
minder
speaker
151–28
See page
60–3
D
7
8
16
41
96
10
3
1
C220c
345
18 PK/BK
85
18 BN/LB
570
18 BK/WH
C298
S268
66–1
Warning Devices
See page
10–8
G203
Door ajar indica-
tor
Stripped chassis