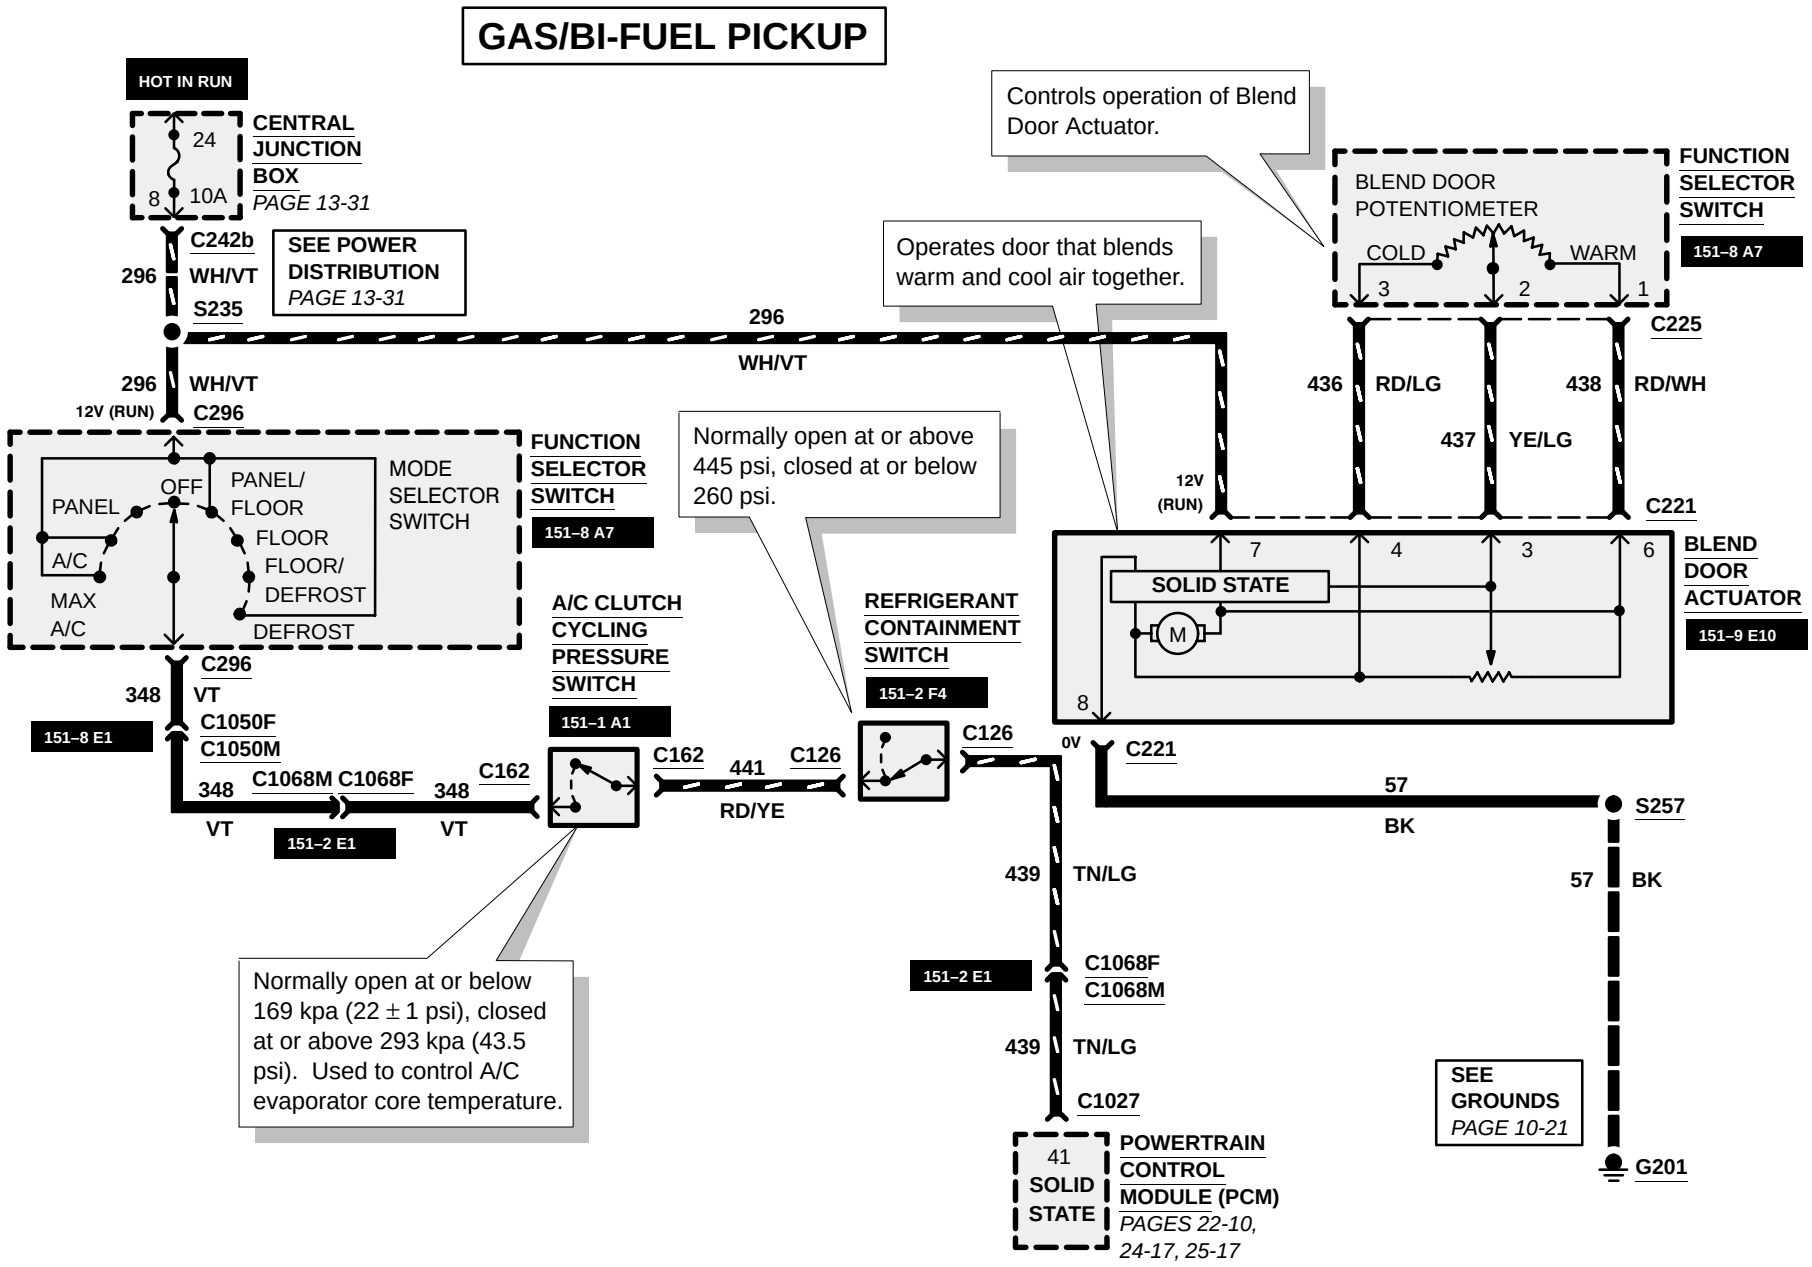
GAS/BI-FUEL PICKUP
HOT IN RUN
24
8
10A
CENTRAL JUNCTION BOX
PAGE 13-31
SEE POWER DISTRIBUTION
PAGE 13-31
C242b
296
WH/VT
S235
296
WH/VT
12V (RUN)
C296
Controls operation of Blend Door Actuator.
Operates door that blends warm and cool air together.
Normally open at or above 445 psi, closed at or below 260 psi.
BLEND DOOR POTENTIOMETER
COLD
WARM
3
2
1
FUNCTION SELECTOR SWITCH
151–8 A7
C225
436
RD/LG
437
YE/LG
438
RD/WH
C221
12V (RUN)
7
4
3
6
SOLID STATE
M
8
BLEND DOOR ACTUATOR
151–9 E10
OFF
PANEL
PANEL/ FLOOR
FLOOR
FLOOR/ DEFROST
DEFROST
A/C
MAX A/C
MODE SELECTOR SWITCH
FUNCTION SELECTOR SWITCH
151–8 A7
348
VT
C296
C1050F
C1050M
151–8 E1
A/C CLUTCH CYCLING PRESSURE SWITCH
151–1 A1
REFRIGERANT CONTAINMENT SWITCH
151–2 F4
348
VT
C1068M
C1068F
151–2 E1
348
VT
C162
C162
441
RD/YE
C126
C126
0V
C221
57
BK
S257
439
TN/LG
151–2 E1
C1068F
C1068M
439
TN/LG
C1027
41
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-10, 24-17, 25-17
57
BK
SEE GROUNDS
PAGE 10-21
G201
Normally open at or below 169 kpa (22 ± 1 psi), closed at or above 293 kpa (43.5 psi). Used to control A/C evaporator core temperature.