C919

PIA

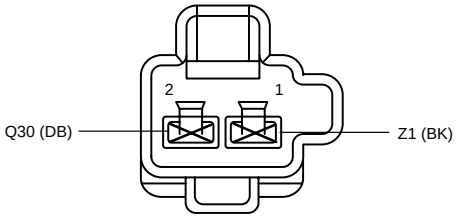

F02347

14334

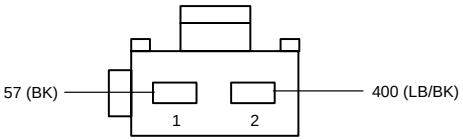

F02349

C921

PIA

A214
Roof opening panel
module (502D70)



F08185

Pin	Circuit	Circuit function
1	Q46 (OG/WH)	Roof opening panel position switch, signal
2	Q41 (WH)	Switched between: Battery voltage, Ground or Open
3	Q43 (VT)	Switched between: Battery voltage, Ground or Open
4	Z1 (BK)	Ground
5	–	not used
6	Q30 (DB)	Accessory relay, output
7	Q5 (RD)	Switched between: Battery voltage, Ground or Open
8	Q6 (OG)	Switched between: Battery voltage, Ground or Open

C920

PIA

M201
Roof opening panel
motor assembly
(15790)

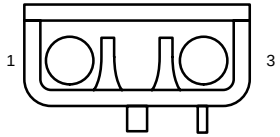

F03209

Pin	Circuit	Circuit function
1	Q5 (RD)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	Q6 (OG)	Switched between: Battery voltage, Ground or Open

C926a

14405

E51
Cargo lamp



F03049

Pin	Circuit	Circuit function
1	1008 (LG/OG)	Interior lamp relay, control
2	–	not used
3	57 (BK)	Ground