C277a (WH)

7A488

A203
Transaxle Control
Module (TCM)

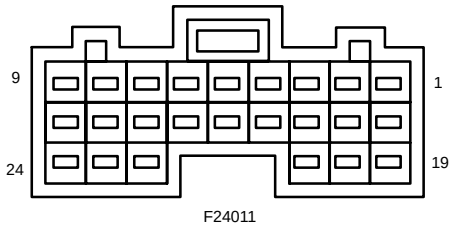

F24011

Pin	Circuit	Circuit function
1	ZY01 (GN/RD)	Electronic Pressure Control (EPC) solenoid
2	ZY02 (YE/BK)	Electronic Pressure Control (EPC) solenoid
3	ZY05 (OG/BU)	Torque Converter Clutch (TCC) solenoid
4	–	not used
5	AV57 (GN/WH)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
6	AV58 (WH)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
7	AV61 (PK/BK)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
8	–	not used
9	–	not used
10	ZY04 (LG)	Voltage supplied in Start and Run (overload protected)
11	ZY06 (YE/VT)	Shift solenoid A
12	ZY07 (YE/GN)	Shift solenoid B
13	ZY03 (BU/OG)	Overdrive indicator, control
14	ZY13 (GY/RD)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
15	AV56 (GN/BK)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
16	ZY14 (BN/YE)	Throttle position switch - Idle input
17	ZY21 (RD/WH)	Throttle position switch - Wide open throttle input
18	EJ17 (RD/YE)	Cruise set, indicator, switch sense
19	ZY09 (LG)	Voltage supplied in Start and Run (overload protected)
20	ZY08 (OG/BK)	Coasting clutch solenoid
21	–	not used
22	ZY39 (GN/OG)	Transaxle Control Module (TCM), to transmission overdrive cancel switch
23	–	not used
24	EJ08 (LG/RD)	Transaxle Control Module (TCM), to Speed control actuator module