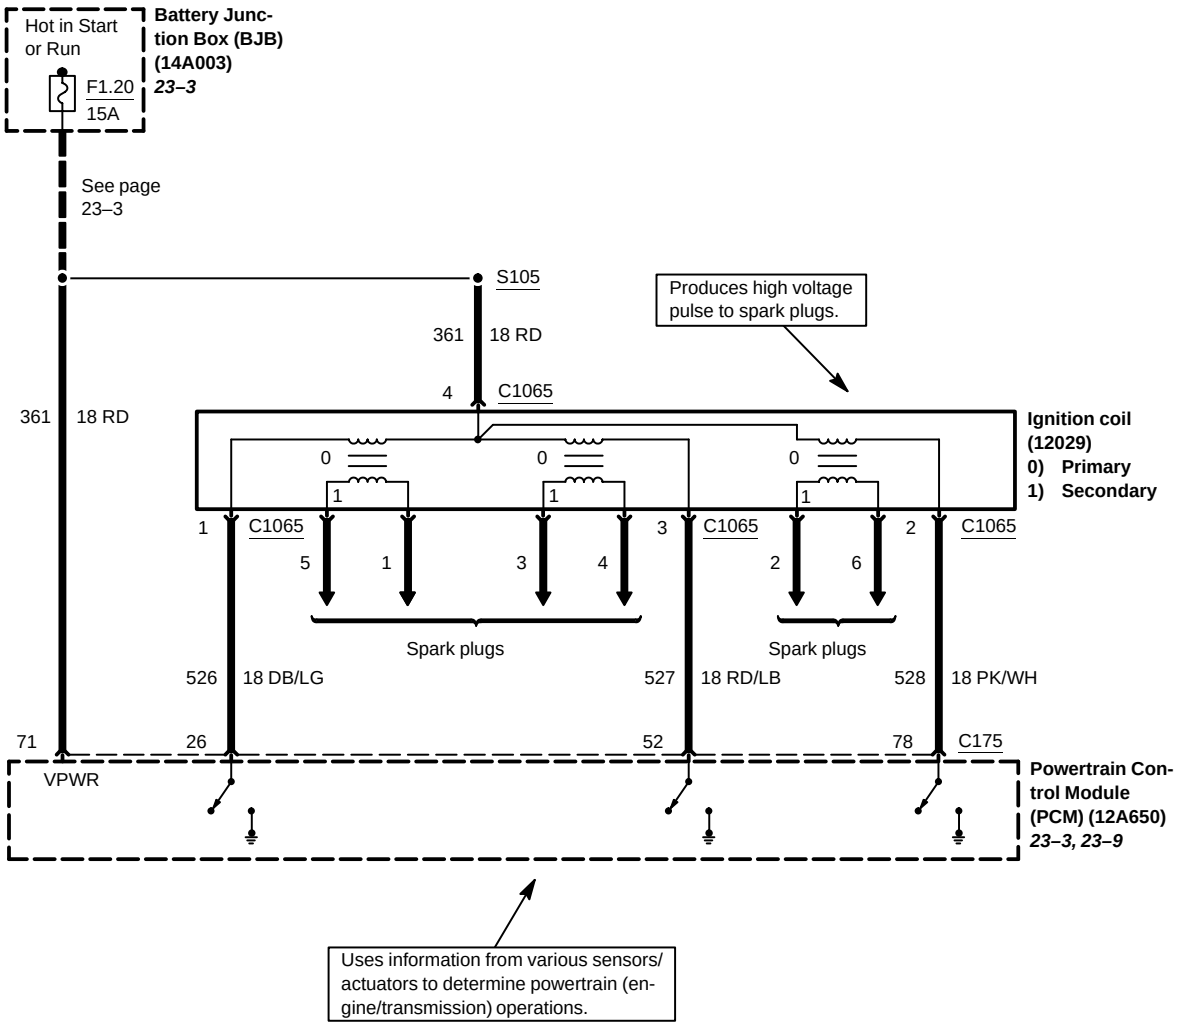
Hot in Start or Run
F1.20
15A
Battery Junction Box (BJB) (14A003)
23–3
See page 23–3
S105
361 18 RD
4 C1065
Produces high voltage pulse to spark plugs.
361 18 RD
Ignition coil (12029)
0) Primary
1) Secondary
0
1
1 C1065
5 1
3 4
Spark plugs
3 C1065
2 6
Spark plugs
2 C1065
526 18 DB/LG
527 18 RD/LB
528 18 PK/WH
71 VPWR
26
52
78 C175
Powertrain Control Module (PCM) (12A650)
23–3, 23–9
Uses information from various sensors/ actuators to determine powertrain (engine/transmission) operations.