C218a

14B242

P140
Air bag sliding contact (14A664)

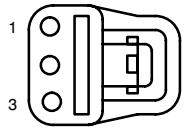

F03145

Pin	Circuit	Circuit Function
1	614 (GY/OG)	Driver air bag, feed, monitor
2	–	not used
3	615 (GY/WH)	Driver air bag, return

C218b

14B242

P140
Air bag sliding contact (14A664)

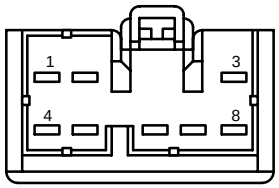

F08089

Pin	Circuit	Circuit Function
1	133 (BK)	Speed control switch, return
2	456 (DG/OG)	Ground – without steering wheel controls
2	456 (DG/OG)	Reference, voltage – with steering wheel controls
3	19 (LB/RD)	Illumination
4	–	not used
5	158 (BK/PK)	Key warning switch (11A127), input
6	151 (LB/BK)	Speed control switch, input
7	276 (BN)	redundant audio control switch feed (SWC+)
8	1 (DB)	Horn relay, control

C220a

14B242

A30
Instrument cluster

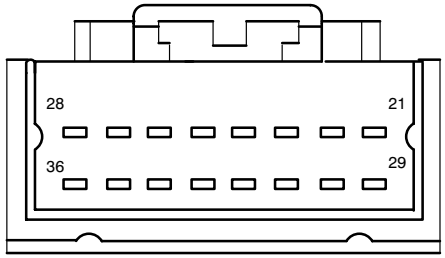

F16097

Pin	Circuit	Circuit Function
21	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
22	–	not used
23	–	not used
24	31 (WH/RD)	Engine oil pressure indicator, control
25	977 (VT/WH)	Brake indicator, control
26	57 (BK)	Ground
27	875 (BK/LB)	Ground
28	563 (OG/YE)	Fuel pump/fuel gauge sender
29	–	not used
30	608 (BK/YE)	Air bag indicator, control
31	–	not used
32	3 (LG/WH)	Turn lamps, feed, left front
33	–	not used
34	–	not used
35	2 (WH/LB)	Turn lamps, feed, right front
36	–	not used