C944

14334

N482
Tonneau cover open/close switch, LH side (14529)

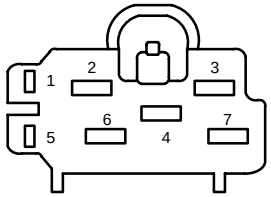

F07044

Pin	Circuit	Circuit function
1	57 (BK)	Illumination, Ground
2	–	not used
3	1631 (VT)	Power Tonneau Cover, Open
4	57 (BK)	Ground
5	19 (LB/RD)	Illumination
6	1629 (PK/LG)	Power Tonneau Cover, Close
7	–	not used

C945

14334

A37
Trip Computer Module (10D898)

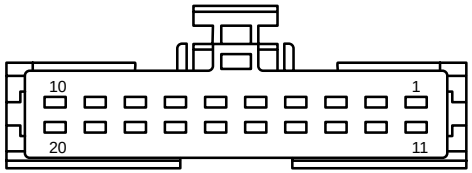

F20049

Pin	Circuit	Circuit function
1	–	not used
2	702 (WH/BK)	Compass data +
3	703 (WH/OG)	Compass data –
4	71 (OG/LG)	Powertrain Control Module (PCM) (12A650) – Data output link
5	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
6	–	not used
7	53 (BK/LB)	Interior lamp relay, switched power, output
8	434 (LB/BK)	Analog dimming, feed
9	705 (LG/OG)	Interior lamps relay, switched power
10	–	not used
11	–	not used
12	729 (RD/WH)	Voltage supplied at all times (overload protected)
13	875 (BK/LB)	Ground
14	1003 (GY/YE)	Voltage in Run (overload protected)
15	29 (YE/WH)	Fuel pump/fuel gauge sender
16	–	not used
17	–	not used
18	403 (LG/VT)	switched power, feed
19	401 (PK)	switched power, feed
20	–	not used