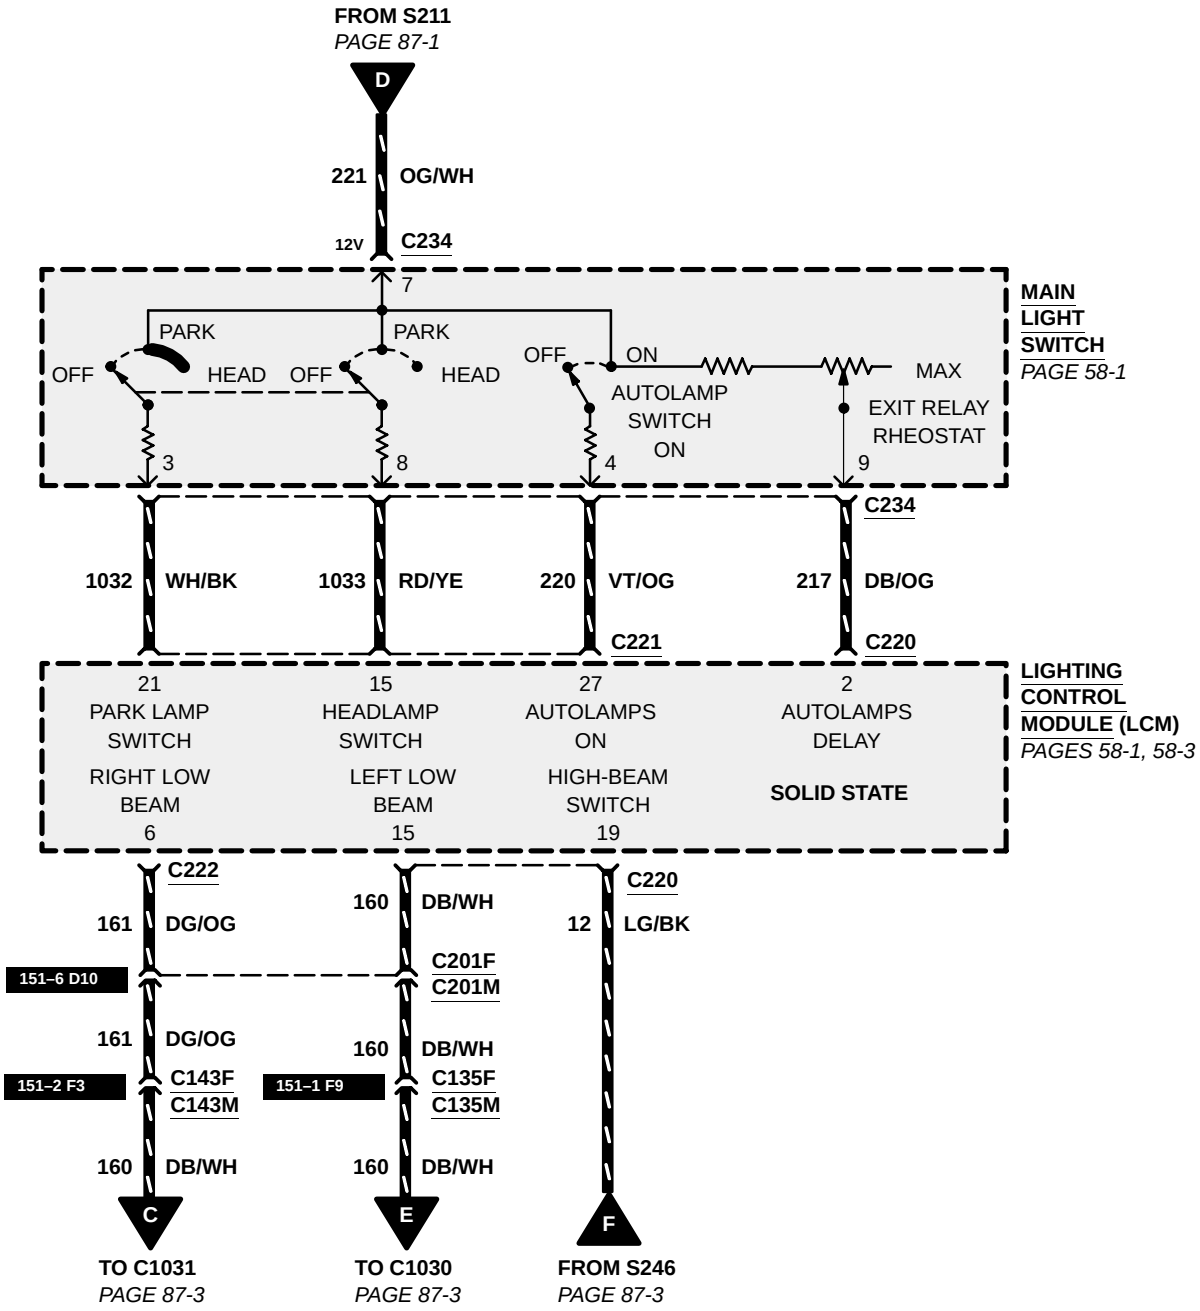
FROM S211
PAGE 87-1
D
221 OG/WH
12V C234
7
PARK
OFF HEAD
PARK
OFF HEAD
OFF ON
AUTOLAMP SWITCH ON
MAX
EXIT RELAY RHEOSTAT
3
8
4
9
MAIN LIGHT SWITCH
PAGE 58-1
C234
1032 WH/BK
1033 RD/YE
220 VT/OG
217 DB/OG
C221
C220
21 PARK LAMP SWITCH RIGHT LOW BEAM 6
15 HEADLAMP SWITCH LEFT LOW BEAM 15
27 AUTOLAMPS ON HIGH-BEAM SWITCH 19
2 AUTOLAMPS DELAY SOLID STATE
LIGHTING CONTROL MODULE (LCM)
PAGES 58-1, 58-3
C222
161 DG/OG
160 DB/WH
C220
12 LG/BK
C201F
C201M
151–6 D10
161 DG/OG
160 DB/WH
151–2 F3
C143F
C143M
151–1 F9
C135F
C135M
160 DB/WH
160 DB/WH
C
E
F
TO C1031
PAGE 87-3
TO C1030
PAGE 87-3
FROM S246
PAGE 87-3