C110

14290

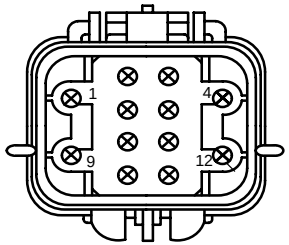

F12045

17A477

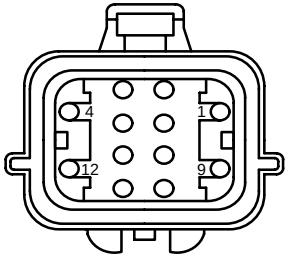

F12046

(1) 15-KA39 (GN/OG)
(2) 31S-XL53 (BK/WH)
(3) 31S-KA19 (BK/RD)
(4) 30S-KA7 (RD/WH)
(5) 31S-XL52 (BK/RD)
(6) 31S-XL50 (BK/OG)
(7) –
(8) –
(9) 30-KA40 (RD/BU)
(10) 91-KA8 (BK/BU)
(11) 31S-XL51 (BK/GN)
(12) 31-KA9 (BK/OG)

C111

12B637

Coil On Plug (COP)
1 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR5 (BN)	Ground, Switched
2	15-RR5 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C112

12B637

Coil On Plug (COP)
2 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR6 (BN/RD)	Ground, Switched
2	15-RR6 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C113

12B637

Coil On Plug (COP)
3 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR7 (BN/BU)	Ground, Switched
2	15-RR7 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C114

12B637

Coil On Plug (COP)
4 (12029)

F02109

Pin	Circuit	Circuit function
1	91S-RR8 (BN/GN)	Ground, Switched
2	15–RR8 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)