C2253c (GY)

14401

Audio/navigation control unit

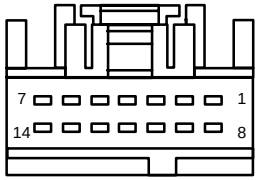

F14081

Pin	Circuit	Circuit function
1	10-GK24 (GY/RD)	video R
2	10-GK25 (GY/OG)	video G
3	9-GK35 (BN)	video, return
4	–	not used
5	1-GK18 (WH/BU)	audio +
6	8-GK23 (WH/BK)	Clock
7	4-GK8 (GY/BK)	CAN Bus +
8	10-GK26 (GY/VT 20)	video B
9	8-GK35 (WH 20)	video, signal
10	–	not used
11	–	not used
12	2-GK18 (GY/VT 20)	audio –
13	–	not used
14	5-GK8 (BU/YE 20)	CAN Bus –

C2253d (GY)

14401

Audio/navigation control unit

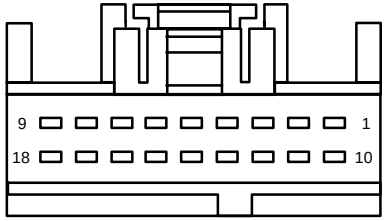

F18027

Pin	Circuit	Circuit function
1	8-MD10A (WH/BK)	Speaker, left front (18808) –
2	8-MD17A (WH/RD)	Speaker, right front (18808) +
3	8-MD11A (WH/VT)	Speaker, left rear (18808) –
4	8-MD18A (WH)	Speaker, right rear (18808) +
5	–	not used
6	–	not used
7	1-MD19 (WH/RD)	Subwoofer +
8	–	not used
9	7-MD27 (YE/VT)	Amplifier enable
10	10-MD10A (GY/BK)	Speaker, left front (18808) –
11	10-MD17A (GY/RD)	Speaker, right front (18808) –
12	10-MD11A (GY/WH)	Speaker, left rear (18808) –
13	10-MD18A (GY)	Speaker, right rear (18808) –
14	–	not used
15	–	not used
16	2-MD19 (GY/RD)	Subwoofer –
17	48-MD15	audio, Shield
18	–	not used