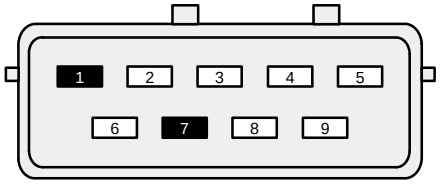

C122 (GRAY)
TRANSMISSION RANGE (TR) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	365 (RD/GN)	Reversing Lamp Feed
3	856 (BN/GN)	Powertrain Control Module (PCM)
4	855 (BN/BU)	Powertrain Control Module (PCM)
5	60 (BK/WH)	Power (Hot in Start or Run)
6	6 (BK/RD)	Starter Control
7	–	NOT USED
8	857 (BN/YE)	Powertrain Control Module (PCM)
9	5 (RD)	Starter Control

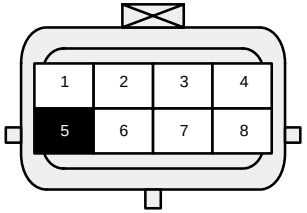

C191
TRANSAXLE (GRAY)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	863 (YE/VT)	EPC Solenoid Input
2	878 (OG)	Transmission Fluid Temperature (TFT) Sensor
3	852 (OG/GN)	Shift Solenoid Input C
4	853 (LG/BU)	Shift Solenoid Input A
5	–	NOT USED
6	63 (LG/BK)	Signal Return
7	851 (GY/WH)	Torque Converter Clutch (TCC) Solenoid Input
8	876 (PK/BK)	Shift Solenoid Input B

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C110	13-13
C147	33-3
C176	24-13
C212	23-9, 24-11
C220	13-15
C240	13-16