Late build

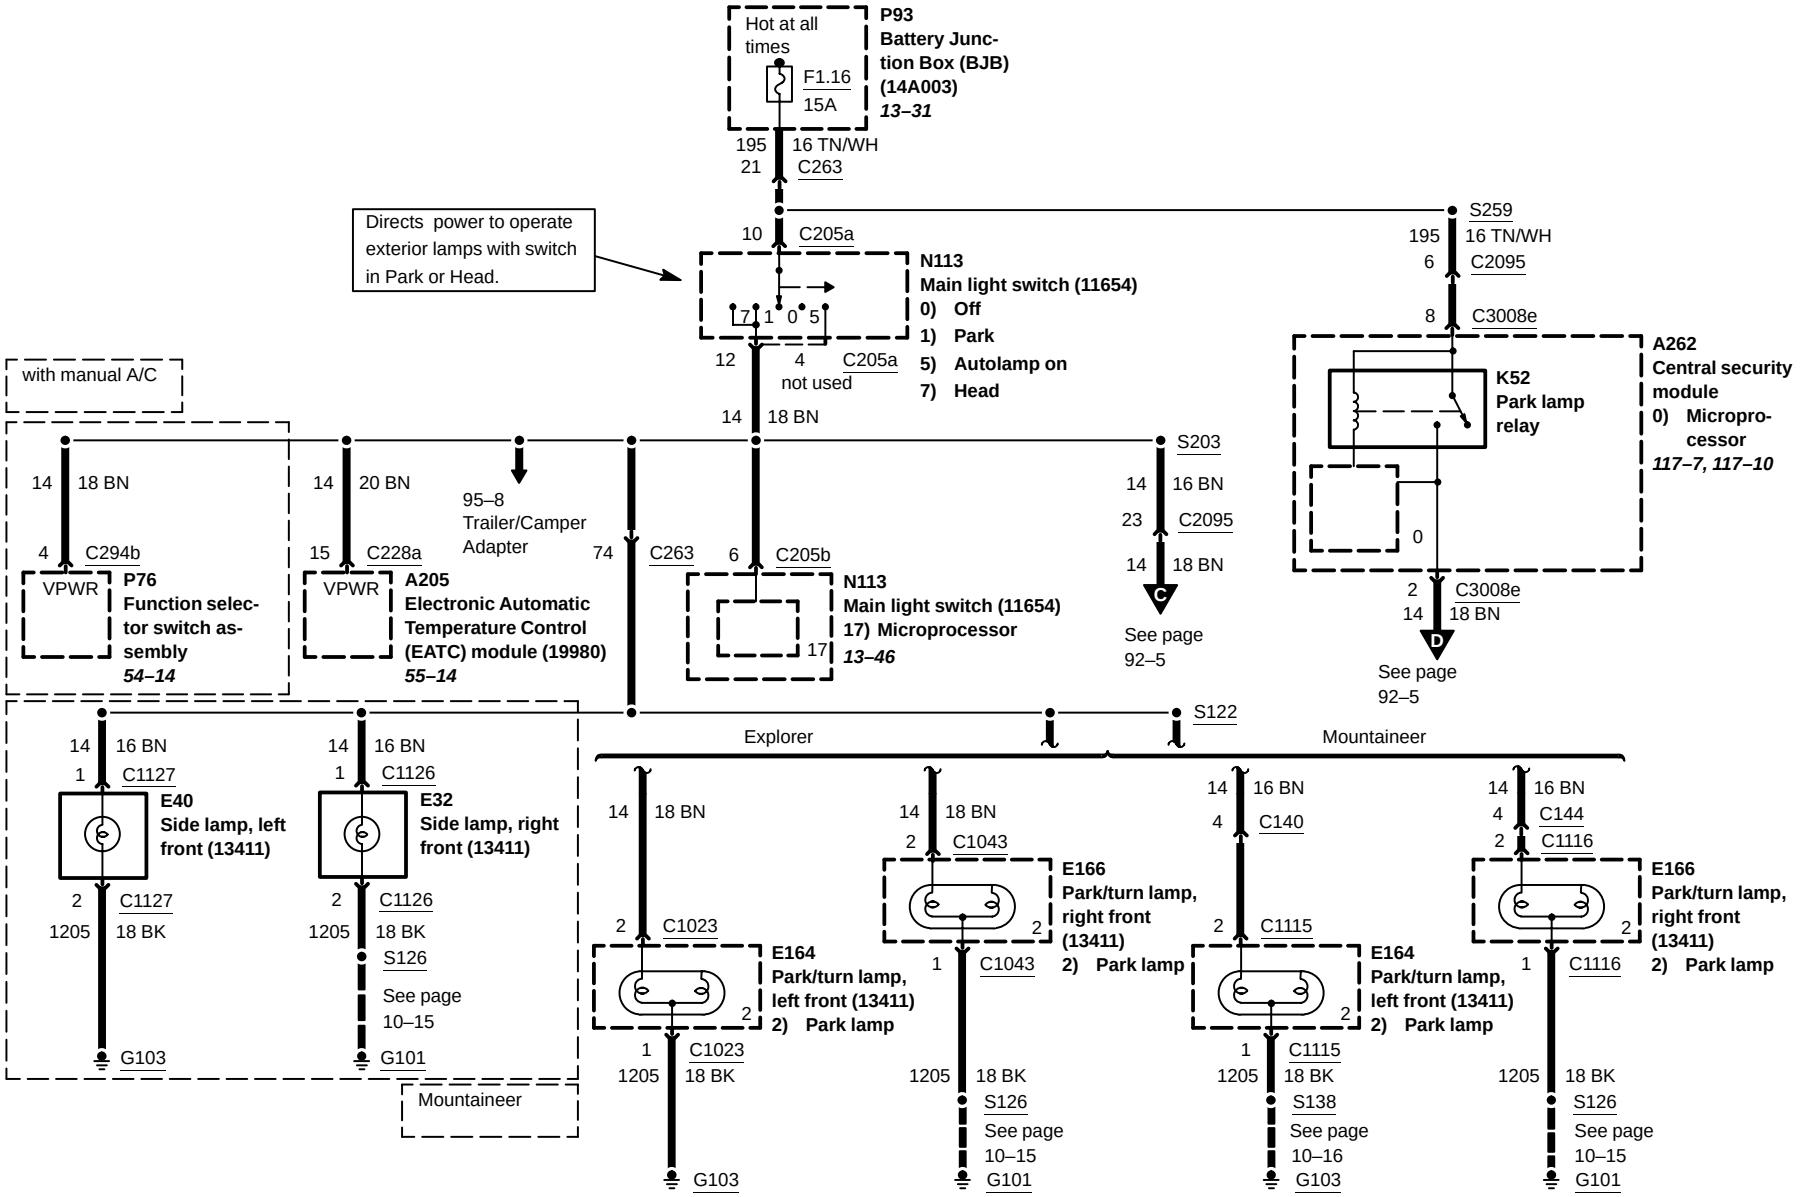
Hot at all times
F1.16
15A
P93
Battery Junction Box (BJB)
(14A003)
13–31
195
21
16 TN/WH
C263
Directs power to operate exterior lamps with switch in Park or Head.
10
C205a
N113
Main light switch (11654)
0) Off
1) Park
5) Autolamp on
7) Head
7 1 0 5
12
4
C205a
not used
14
18 BN
S259
195
6
16 TN/WH
C2095
8
C3008e
A262
Central security module
0) Microprocessor
117–7, 117–10
K52
Park lamp relay
0
2
14
C3008e
18 BN
D
See page 92–5
with manual A/C
14
18 BN
4
C294b
VPWR
P76
Function selector switch assembly
54–14
14
20 BN
15
C228a
VPWR
A205
Electronic Automatic Temperature Control (EATC) module (19980)
55–14
95–8
Trailer/Camper Adapter
74
C263
6
C205b
17
N113
Main light switch (11654)
17) Microprocessor
13–46
S203
14
16 BN
23
C2095
14
18 BN
C
See page 92–5
S122
Explorer
Mountaineer
14
16 BN
1
C1127
E40
Side lamp, left front (13411)
2
C1127
1205
18 BK
G103
14
16 BN
1
C1126
E32
Side lamp, right front (13411)
2
C1126
1205
18 BK
S126
See page 10–15
G101
Mountaineer
14
18 BN
2
C1023
E164
Park/turn lamp, left front (13411)
2) Park lamp
1
C1023
1205
18 BK
G103
14
18 BN
2
C1043
E166
Park/turn lamp, right front (13411)
2) Park lamp
1
C1043
1205
18 BK
S126
See page 10–15
G101
14
16 BN
4
C140
2
C1115
E164
Park/turn lamp, left front (13411)
2) Park lamp
1
C1115
1205
18 BK
S138
See page 10–16
G103
14
16 BN
4
C144
2
C1116
E166
Park/turn lamp, right front (13411)
2) Park lamp
1
C1116
1205
18 BK
S126
See page 10–15
G101