C2033

14401

Power point
(19N236)

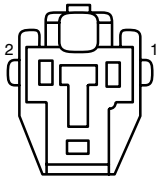

F03163

Pin	Circuit	Circuit function
1	29-DJ7 (OG/WH)	Voltage supplied at all times (overload protected)
2	–	not used
3	31-DJ7 (BK/WH)	Ground

C2099

14401

Passenger Air bag
Deactivation (PAD)
switch

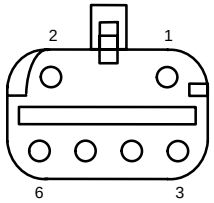

F06263

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	9-JA26 (BN/YE)	Sensor signal return (reference/ground)
4	75-JA26 (YE/BK)	Voltage: Ignition switch in Accessory or Run
5	8-JA26 (WH/BK)	Sensor signal
6	31-JA26 (BK/RD)	Ground