C132

14398

B203
Ambient air temperature sensor (19E702)

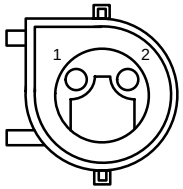

F02177

Pin	Circuit	Circuit function
1	234 (DB/WH)	Ambient air temperature sensor (19E702), return
2	233 (DB/YE)	Ambient air temperature sensor (19E702), feed

C133 (GY)

14398

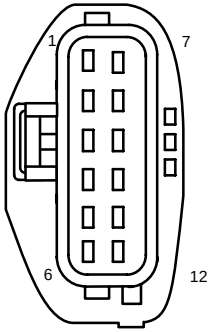

F12081

(1) 570 (BK/WH)
(2)
(3)
(4)
(5)
(6)
(7) 20 (WH/LB)
(8) 1205 (BK)
(9)
(10) 391 (RD/YE)
(11)
(12) 1138 (VT/WH)

12B637

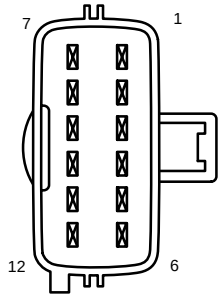

F12073

(1) 570 (BK/WH)
(2)
(3)
(4)
(5)
(6)
(7) 20 (WH/LB)
(8)
(9)
(10) 391 (RD/YE)
(11)
(12) 1138 (VT/WH)

C135

14398

A7
ABS control module (2C219)

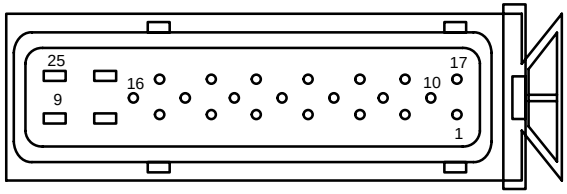

F25007

Pin	Circuit	Circuit function
1	1203 (BK/LB)	Ground
2	810 (RD/LG)	Brake pedal position switch (13480), input
3	514 (YE/RD)	Wheel speed sensor, right front (2C204) +
4	516 (YE/BK)	Wheel speed sensor, right front (2C204) –
5	–	not used
6	–	not used
7	–	not used
8	1203 (BK/LB)	Ground
9	532 (OG/YE)	Voltage supplied at all times (overload protected)
10	307 (BK/YE)	Brake pressure switch (2B264), input
11	960 (BK/LB)	Four–wheel drive control module, to ABS control module
12	784 (LB/BK)	Four–wheel drive, indicator, Low
13	–	not used
14	–	not used
15	603 (DG)	Anti–lock brake indicator, control
16	–	not used
17	521 (TN/OG)	Wheel speed sensor, left front (2C205) +
18	522 (TN/BK)	Wheel speed sensor, left front (2C205) –
19	–	not used
20	601 (LB/PK)	Voltage in Run or Accessory (overload protected)
21	523 (RD/PK)	Wheel speed sensor, right rear +
22	519 (LG/BK)	Wheel speed sensor, left rear –
23	70 (LB/WH)	ISO Bus
24	1205 (BK)	Ground
25	533 (TN/RD)	Voltage supplied at all times (overload protected)