## C981

**13A840**

H4
Second horn




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 29S-GJ10 (OG/GN) | Voltage supplied at all times (overload protected), switched |
| 2 | 31-GJ10 (BK) | Ground |

## C982

**13A840**

H1
Horn




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 29S-GJ6 (OG/YE) | Voltage supplied at all times (overload protected), switched |
| | 29S-GJ1 (OG/BU) | Voltage supplied at all times (overload protected), switched |
| 2 | 31-GJ6 (BK) | Ground |
| | 31-GJ1 (BU) | Ground |

## C990

**14014**

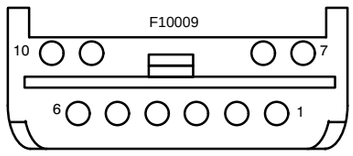


A14
Subwoofer amplifier

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-MD19 (WH/RD) | Sensor signal |
| | 8-MD19A (WH/RD) | Sensor signal |
| 2 | 31-MD19A (BK) | Ground |
| | 31-MD19D (BK) | Ground |
| 3 | 31-MD19B (BK) | Ground |
| | 31-MD19E (BK) | Ground |
| 4 | 30-MD19B (RD) | Voltage supplied at all times (not overload protected) |
| | 30-MD19F (BK) | Voltage supplied at all times (not overload protected) |
| 5 | 30-MD19C (RD) | Voltage supplied at all times (not overload protected) |
| | 30-MD19G (RD) | Voltage supplied at all times (not overload protected) |
| 6 | 30-MD19D (RD) | Voltage supplied at all times (not overload protected) |
| | 30-MD19H (RD) | Voltage supplied at all times (not overload protected) |
| 7 | 1-MD23 (WH/BK) | Audio signal positive |
| 8 | 2-MD23 (GY/BK) | Audio signal negative |
| 9 | – | not used |
| 10 | 31-MD19C (BK) | Ground |
| | 31-MD19F (BK) | Ground |