C612

14A005

Speaker, right front (18808)

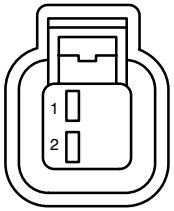

F02069

Pin	Circuit	Circuit function
1	8-MD17 (WH/RD)	Speaker, right front (18808) (+)
2	10-MD17 (GY/RD)	Speaker, right front (18808) (–)

C929 (BK)

14A005

Interior/map lamps assembly, front

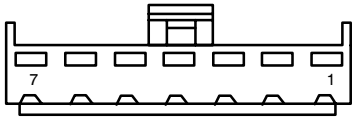

F07075

Pin	Circuit	Circuit function
1	–	not used
2	31-LB19 (BK/BU)	Ground
3	–	not used
4	–	not used
5	–	not used
6	9-LB14 (BN/BU)	Sensor signal return (reference/ground)
7	29-LB22 (OG/GN)	Switched System Power (SSP)
	29S-LB19 (OG/BU)	

C1003

14290

COPS & Heated Oxygen Sensor (HO2S) relay

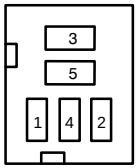

F05064

Pin	Circuit	Circuit function
1	15-RH9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31-RH9 (BK/BU)	Ground
3	30-RH9 (RD/BU)	Voltage supplied at all times (not overload protected)
4	–	not used
5	15S-DB2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched