C2220a

14401

A30
Instrument cluster

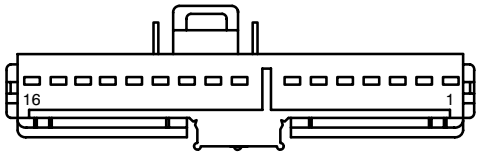

F16057

Pin	Circuit	Circuit function
1	29 (YE/WH)	Fuel pump/fuel gauge sender
2	570 (BK/WH)	Power ground
3	231 (BK/YE)	voltage applied, instrument cluster
4	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
5	939 (VT)	traction assist, indicator, Lamp
6	57 (BK)	Ground
7	3 (LG/WH)	Turn lamps, feed, left front
8	450 (DG/LG)	Safety belt indicator, feed
9	904 (LG/RD)	Generator/Battery indicator, control
10	88 (BK/WH)	Voltage in Run (overload protected)
11	419 (DG/LG)	Air suspension module (3C142), to, Instrumentation and Warning System
12	1907 (WH/LG)	Powertrain Control Module (PCM) (12A650)
13	1053 (LB/PK)	Voltage supplied at all times (overload protected)
14	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
15	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
16	679 (GY/BK)	Vehicle Speed Sensor (VSS) +

C2220b

14401

A30
Instrument cluster

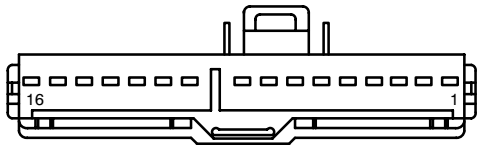

F16022

Pin	Circuit	Circuit function
1	–	not used
2	2 (WH/LB)	Turn lamps, feed, right front
3	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
4	–	not used
5	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
6	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
7	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
8	31 (WH/RD)	Engine oil pressure indicator, control
9	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
10	603 (DG)	Anti–lock brake indicator, control
11	977 (VT/WH)	Anti–lock brake indicator, control
12	608 (BK/YE)	Air bag indicator, control
13	1270 (OG/RD)	Engine cooling, indicator, signal
14	12 (LG/BK)	Switched, Ground
15	57 (BK)	Ground
16	484 (OG/BK)	Headlamp switch, on input