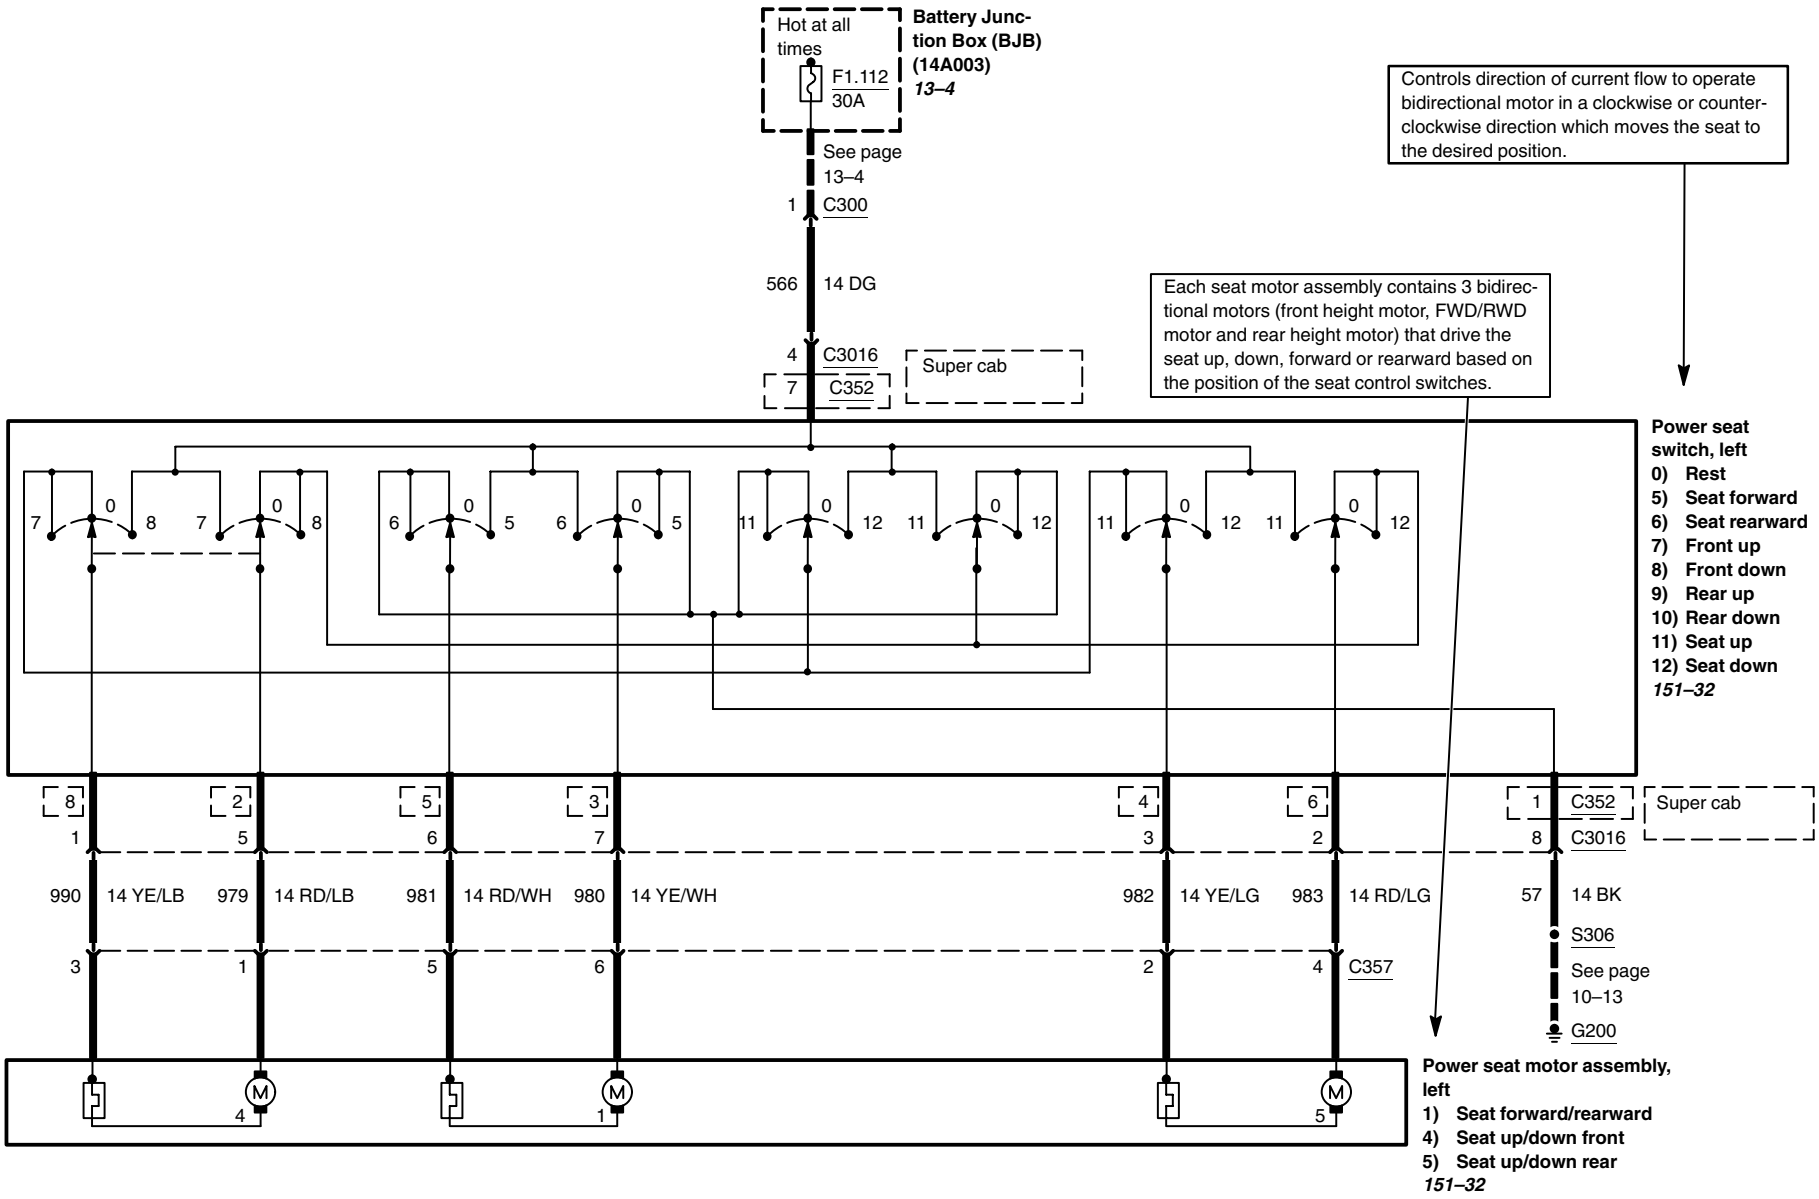
Hot at all times
F1.112
30A
Battery Junction Box (BJB) (14A003)
13–4
See page 13–4
1
C300
566
14 DG
4
C3016
7
C352
Super cab
Controls direction of current flow to operate bidirectional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
Each seat motor assembly contains 3 bidirectional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.
Power seat switch, left
0) Rest
5) Seat forward
6) Seat rearward
7) Front up
8) Front down
9) Rear up
10) Rear down
11) Seat up
12) Seat down
151–32
8
1
990
14 YE/LB
3
2
5
979
14 RD/LB
1
5
6
981
14 RD/WH
5
3
7
980
14 YE/WH
6
4
3
982
14 YE/LG
2
6
2
983
14 RD/LG
4
C357
1
C352
8
C3016
Super cab
57
14 BK
S306
See page 10–13
G200
M
4
1
5
Power seat motor assembly, left
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
151–32