C821

14K733

B140
Primary brake pressure sensor

F03108

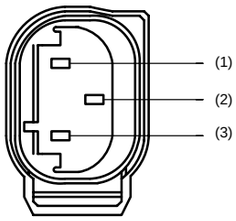

Pin	Circuit	Circuit Function
1	9-CF64 (BN/YE)	Sensor signal return (reference/ground)
	7-CF64 (YE/BK)	Voltage D.C. supplied at all times (sensor)
2	8-CF64 (WH/BK)	Sensor signal
3	7-CF64 (YE/BK)	Voltage D.C. supplied at all times (sensor)
	9-CF64 (BN/YE)	Sensor signal return (reference/ground)

C822

2C195

B141
Secondary brake pressure sensor

F03108

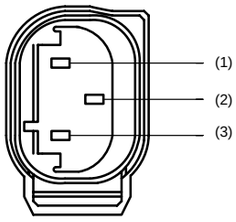

Pin	Circuit	Circuit Function
1	9-CF65 (BN/WH)	Sensor signal return (reference/ground)
2	8-CF65 (WH/VT)	Sensor signal
3	7-CF65 (YE/VT)	Voltage D.C. supplied at all times (sensor)

C824

14401

N82
Brake pedal position switch

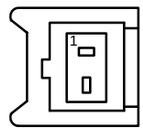

F02014

Pin	Circuit	Circuit Function
1	15S-PG16 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-PG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched

C825

14401

N81
Clutch pedal position switch

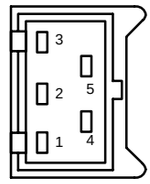

F05012

Pin	Circuit	Circuit Function
1	15S-PG17 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	15S-PG7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	8-BB6 (WH)	Sensor signal
5	9-BB6 (BN)	Sensor signal return (reference/ground)