C421

12A522

A147
Powertrain Control
Module (PCM)
(12A650)

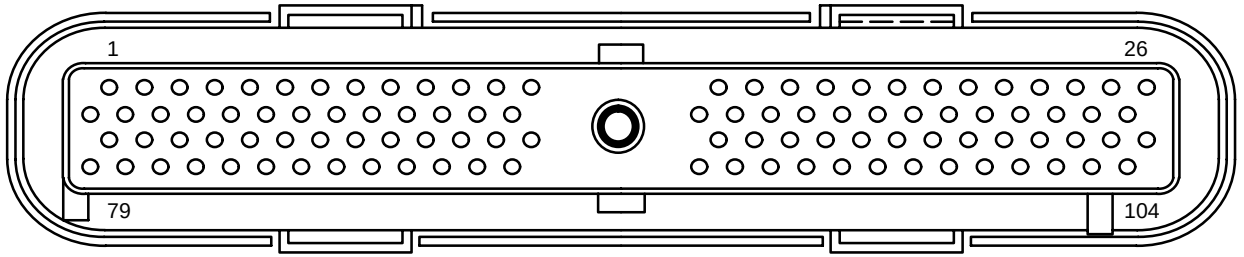

F104001

Pin	Circuit	Circuit function
1	–	not used
2	91S-RD7 (BK/OG)	Ground, Switched
3	–	not used
4	–	not used
5	–	not used
6	91S-TA23 (BK/YE)	Ground, Switched
7	–	not used
8	91S-RJ16 (BK/BU)	Ground, Switched
9	8-GA7 (WH/RD)	Sensor signal
10	–	not used
11	91S-TA24 (BK/BU)	Ground,Switched
12	8-GA7 (WH/RD)	Sensor signal
	8-GG18 (WH/BK)	Sensor signal
13	8-RA1 (WH/BU)	Sensor signal
14	–	not used
15	5-RE8 (BU)	Data link, bus negative

Pin	Circuit	Circuit function
16	4-RE8 (GY)	Data link, bus positive
17	91S-PA17 (BK/WH)	Ground, Switched
18	–	not used
19	10-GL37 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
20	91S-RL12 (BK/BU)	Ground, Switched
21	8-RJ4 (WH/RD)	Sensor signal
22	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)
23	–	not used
24	91-RE8A (BK/YE)	Ground
25	91-RE21 (BK/RD)	Ground
26	9-RR1 (BN/BU)	Sensor signal return (reference/ground)
27	31S-BB12 (BK/YE)	Ground, Switched
28	8-RE2 (WH/VT)	Sensor signal

Pin	Circuit	Circuit function
29	15S-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
30	–	not used
31	8-CE6 (WH)	Sensor signal
32	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
33	9-RJ29 (BN/BU)	Sensor signal return (reference/ground)
34	33-XL7 (YE/GN)	Switched between: Battery voltage, Ground or Open
35	8-RJ25 (WH/BU)	Sensor signal
36	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
37	8-TA26 (WH/RD)	Sensor signal
38	8-RJ6 (WH/GN)	Sensor signal
39	8-RJ17 (WH/VT)	Sensor signal
40	15S-RE16 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
41	15S-RE9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
42	31S-GL36 (BK/BU)	Ground, Switched
	91S-RL20 (BK/RD)	Ground, Switched
43	8-GH6 (WH)	Sensor signal
44	31S-GL36 (BK/BU)	Ground, Switched
45	91S-RL27 (BK/RD)	Ground, Switched

Pin	Circuit	Circuit function
46	–	not used
47	91S-PA25 (BK/GN)	Ground, Switched
48	8-GB10 (WH/BK)	Sensor signal
49	–	not used
50	–	not used
51	91-RE8C (BK/YE)	Ground
52	9-RR2 (BN/GN)	Sensor signal return (reference/ground)
53	8-GL37 (WH/GN)	Sensor signal
54	91S-RH5 (BK/BU)	Ground, Switched
55	29-RE8 (OG/YE)	Voltage supplied at all times (overload protected)
56	91S-RL25 (BK/BU)	Ground, Switched
57	8-RJ18 (WH/BK)	Sensor signal
58	8-RJ29 (WH/BU)	Sensor signal
59	8-RJ29A (WH/BU)	Sensor signal
	8-BA9 (WH/GN)	Sensor signal
60	8-RJ14 (WH)	Sensor signal
61	8-RJ26 (WH/GN)	Sensor signal
62	8-RJ13 (WH/VT)	Sensor signal
63	8-RJ11 (WH/GN)	Sensor signal
64	8-BB6 (WH)	Sensor signal
	8-TA9 (WH/GN)	Sensor signal