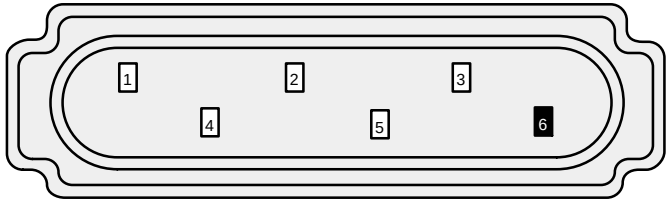

C135

BRAKE BOOSTER SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1580 (WH/LG)	EAS Failsafe Switch (Normally Open)
2	1581 (PK/LB)	EAS Release Swtich (Normally Closed)
3	1583 (BN/WH)	EAS Solenoid Drive (Low Side)
4	1582 (LG/RD)	EAS Supply (High Side)
5	1590 (LB)	EAS Release Switch Common
6	–	NOT USED

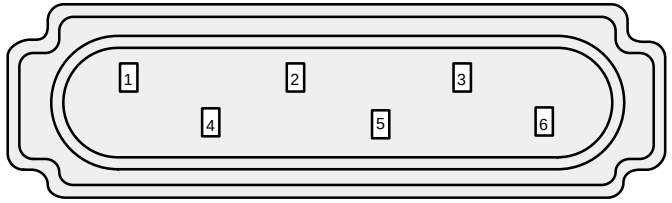

C356

YAW SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1574 (DB)	Inertial Sensor 5v Supply
2	1577 (RD/LB)	Lateral Acceleration Signal
3	1576 (TN/BK)	Yaw Rate Signal
4	1578 (GY/BK)	Inertial Sensor Self Test
5	1579 (OG/RD)	Ring Frequency (Raster)
6	1575 (BK/WH)	Inertial Sensor Ground